

PN: GR07FEG24A

95~02 GMC SAFARIVAN BILLET GRILLE


Hardware

4-- 8 x 2" Truss Head Tapping Screws 4--8 U-Clip Nuts

4-- U Tabs

NOTE: Instruction for billet grille also applies to stainless steel grille.

- (1) Opening the hood and remove the factory grille shell from the vehicle.
- (2) Use masking tape on the face of the grille to protect from scratching. Cut the inside of the grille opening; do not cut the inner plastic that surrounds the opening. File or sand the edges smooth.

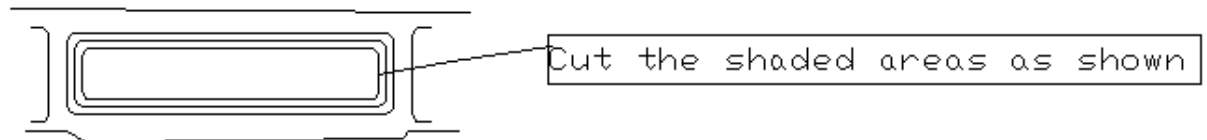

- (3) Place the insert in the opening just behind the chrome trim. Make sure the insert is centered. Drill a 3/16" hole into the plastic on top aligned with each bracket. Drill a 1/8" hole aligned with the rods on the bottom and rivet the insert in place.
- (4) Re-install the grille assembly back on the vehicle.

Installation is now complete!!!!

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!