



PATENT PRODUCT

Grille Installation Instruction

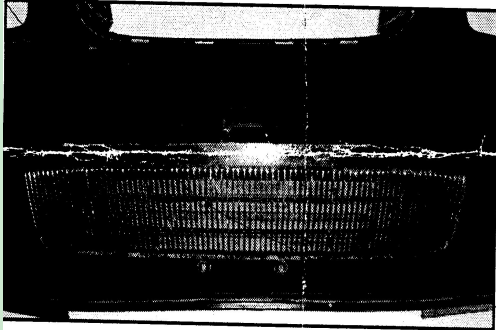
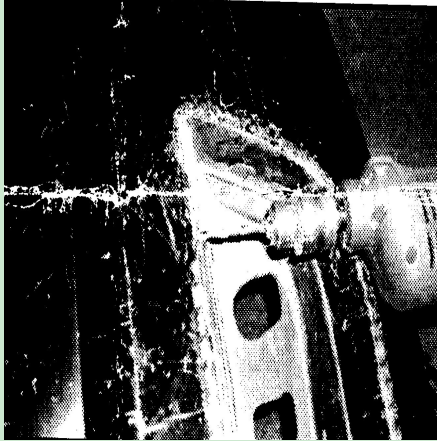
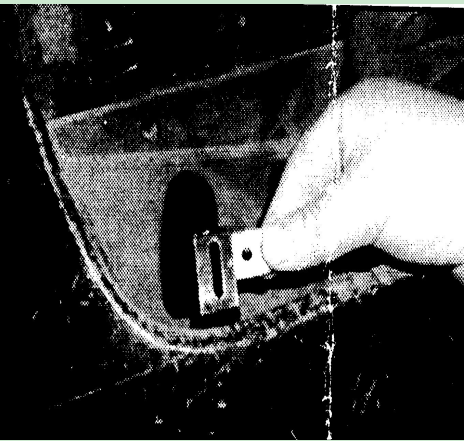
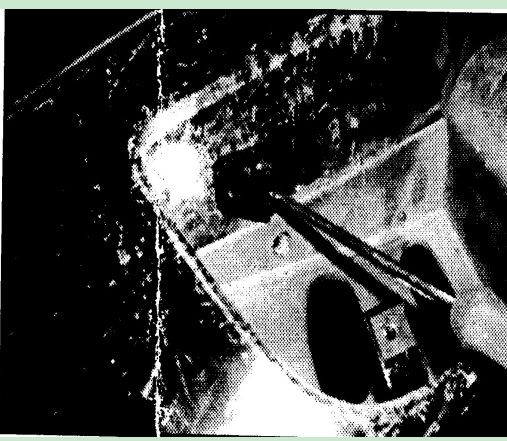
Rev. 131201

Part#	GR07FEG80V	Application	07~10 GMC Yukon Low Bumper Vertical					
-------	------------	-------------	--	--	--	--	--	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	84 Billets	5	Flange Nut	8	M4
	2	Phillips Screws	4	M4-30	6	Flat Nut	4	8#
	3	Phillips Screws	4	M4-20	7	90° L Bracket	2	/
	4	Screws	4	8#-1"	8	54° L Bracket	2	/

Install Notes: Overlay Replacement Drill Cut

Installation

<p>1. Identify the grille & hardware with parts list.</p>	<p>2. Pop hood, remove plastic shroud at the top and set fasteners aside. Then using factory instructions, remove the entire front grille shell.</p>	 <p>3. Center the billet grille into the opening of the factory grille shell. Then mark four spots through the holes on the tabs of billet grille.</p>
 <p>4. Using a Drill with a 1/16" drill bit, drill four holes at those marked spots.</p>	 <p>5. Put Screws on each of the L Bracket that the hole matches with bracket's hole.</p>	 <p>6. Loosely attach the Billet Grille to the grille shell and inserting the Phillips screws (from the front) through the Billet Grille holes and metal Bracket, secure them with Flange nuts provided.</p>
<p>7. Once the Billet grille is loosely attached, center it and tighten all Phillips screws at the same rate.</p>	<p>8. Reinstall the black plastic cover which was removed in step 2.</p>	<p>9. Installation completed!!!</p>

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!