
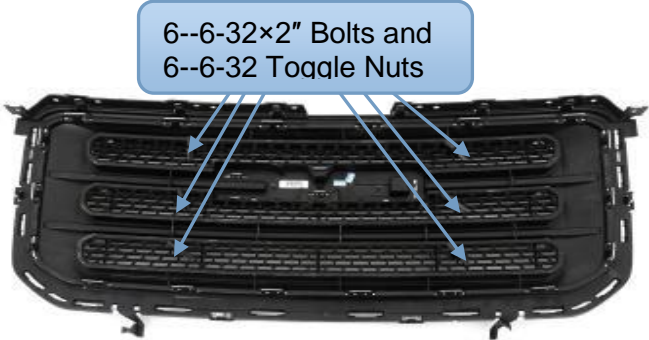





PATENT PRODUCT

Grille Installation Instruction

Rev. 141001

Part#	GR07FEI75J	<i>Application</i>	For 2013-2016 GMC Acadia With Logo Show					
Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Stainless steel	4	Truss Head Bolts	6	6-32x1"
	2	Billet Grille	1	Stainless steel	5	Toggle Nut	6	6-32
	3	Billet Grille	1	Stainless steel				
Install Notes: Overlay <input checked="" type="checkbox"/> Replacement <input type="checkbox"/> Drill <input type="checkbox"/> Cut <input type="checkbox"/>								
Step	Description				illustration			
1	Identify the grille & hardware with parts list.							
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.							
3	Center the billet grille into the opening of the factory grille shell. Secure the bolt to the threaded holes on the front of the grille. Be sure the bolts are through the grille shell.							
4	Secure billet grille using Toggle Nuts from the back side of the grille shell.							
5	Make sure the billet grille is centered and tighten the fasteners.							
6	Reinstall the black plastic cover which was removed in step 2.							
7	Installation completed!!!							

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!