

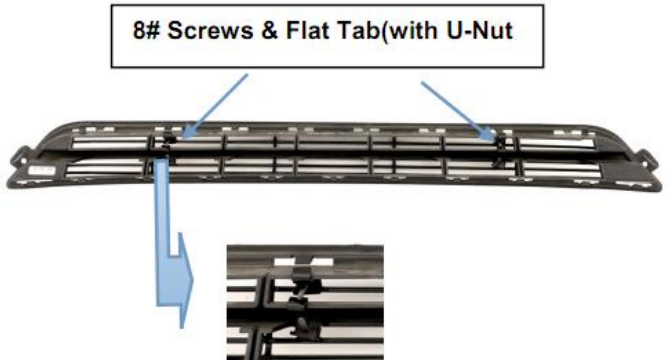



| | | | |
|-------|------------|-------------|-----------------------------------|
| Part# | GR07FEI76H | Application | 2013-2014 GMC Acadia Lower Bumper |
|-------|------------|-------------|-----------------------------------|

| Parts List | Item | Part Name | QTY | Description | Item | Part Name | QTY | Description |
|------------|------|---------------|-----|-------------|------|-----------|-----|-------------|
| | 1 | Billet Grille | 1 | Aluminum | 3 | Screws | 4 | 8#x1 1/2" |
| | 2 | U-Nut | 4 | 8# | 4 | Flat Tab | 4 | |

Install Notes: Overlay Replacement Drill Cut

| Step | Description | illustration |
|------|---|--|
| 1 | Identify the grille & hardware with parts list. |  |
| 2 | Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. | N/A |
| 3 | Install the u-nuts onto the flat tabs. |  |
| 4 | Center the billet grille onto the factory grille. Insert screw through the weld tab hole on the billet grille cure the grille with the 8# screws and flat Tab(with U-clip nuts). Be sure the screws are through the OEM grille shell. |  <p>8# Screws & Flat Tab(with U-Nut)</p> |
| 5 | Make sure the billet grille is centered and tighten the fasteners.but do not over-tighten. | N/A |
| 6 | Reinstall the black plastic cover which was removed in step 2. | N/A |
| 7 | Installation completed!!! |  |

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!