



# PATENT PRODUCT Grille Installation Instruction

Rev. 20220301

<b>Part#</b>	G65049C&J&S	<b>Application</b>	For 2021-UP GMC Canyon Elevation / AT4
--------------	-------------	--------------------	----------------------------------------


Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	#1	Billet Grille	1	Stainless Steel	#3	Clip Nuts	6	8#
	#2	Truss Head Screws	6	8#-2.5"	#4	Tabs	6	

**Install Notes:** Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional: pop hood, remove the black plastic cover (on top of OEM grille) from vehicle. If you are still unable to access the rear, remove the grille shell according to factory manual.	
3	Hold the grille shell, remove the black trim strip as shown (By removing the clips from back).	



Front View

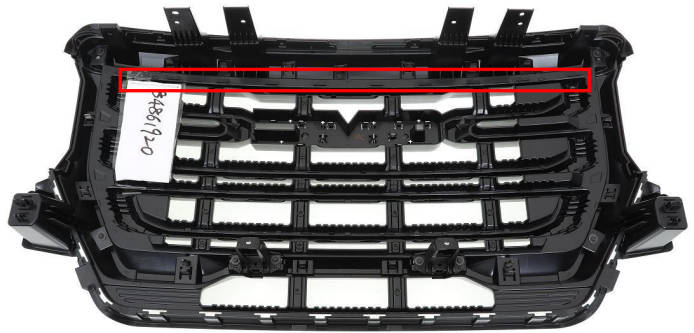

Back View


4	Install the Clip Nuts onto the Tabs as shown.
---	-----------------------------------------------



The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

<b>Part#</b>	G65049C&J&S	<b>Application</b>	For 2021-UP GMC Canyon Elevation / AT4
--------------	-------------	--------------------	----------------------------------------

**5** Thread a Truss Head Screw in each nut welded to the grille. Secure billet grille using the Clip Nuts and the Tabs from the back side of the grille shell.

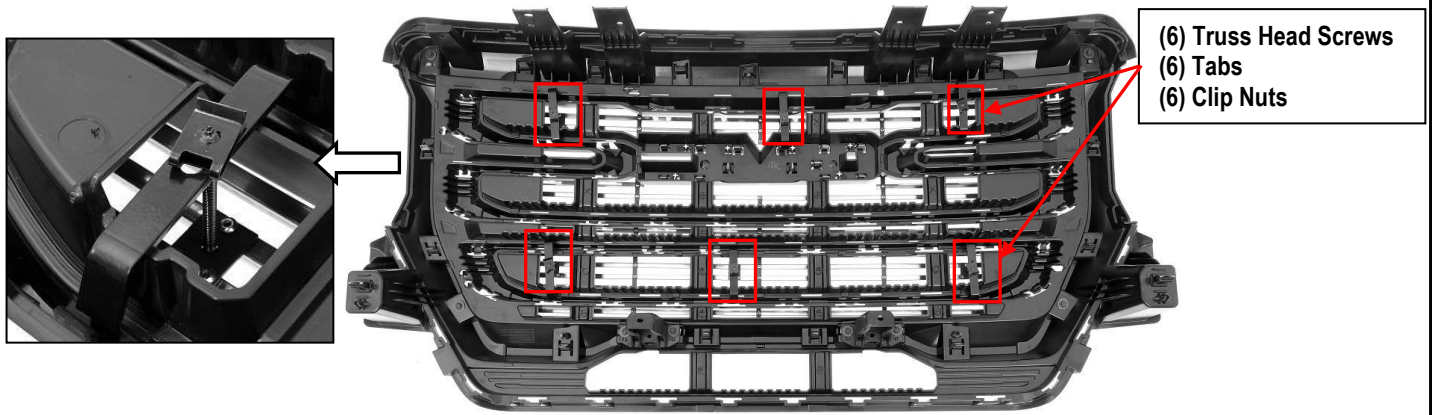

**6** Make sure the insert is centered and tighten the hardware.

**7** Reinstall the plastic shroud with the fasteners removed in Step 2.

**8** Installation completed.



The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!