
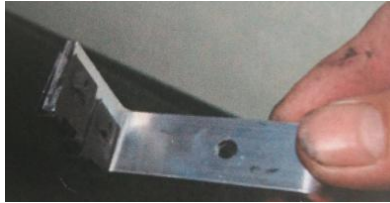

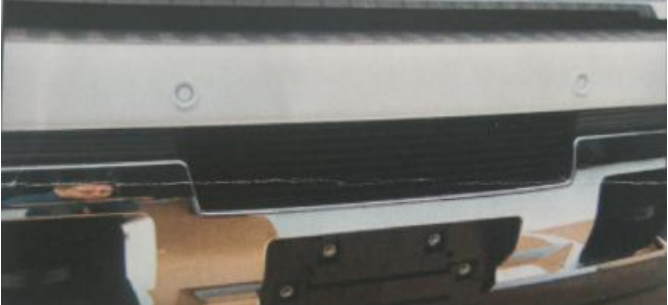


Part#	<b>GR07FFC26A</b>	Application	<b>2015-2016 GMC Sierra 2500/3500 Lower Bumper</b>
-------	-------------------	-------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Aluminum	4	Mounting bracket hooks	2	
	2	Head Screws	4	#8 1"	5	Self drilling screw	2	#8 3/4 "
	3	U-Nuts	4	#8	6	Flat nut	2	#8

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	You may need to remove the black plastic cover (at the bottom of OEM front bumper) from vehicle. This will allow access to the rear of the grille shell.	
3	Attach the two U Nuts to each side of the mounting brackets	
4	Place the bracket on the inside of the bumper opening. Drill a 3/16 " hole thru the plastic using the bracket as a guide. Secure on the back of the plastic with the flat nut and screw bract into place with the #10 screws	
5	Secure grille using the screws and u-nuts from the back side of the OEM grille shell.	
6	Make sure the grille is centered and tighten the fasteners.	
7	Reinstall the black plastic cover which was removed in step 2.	
8	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!