



# PATENT PRODUCT

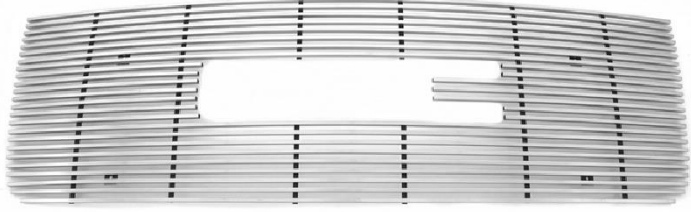
## Grille Installation Instruction

Rev. 190101

|              |                    |                    |   |
|--------------|--------------------|--------------------|---|
| <b>Part#</b> | GR07FFD74<br>C/S/J | <i>Application</i> | <b>For 2007-2013 GMC Sierra 1500 New Body</b> |
|--------------|--------------------|--------------------|---|

|                   | Item | Part Name     | QTY | Description     | Item | Part Name                 | QTY | Description |
|-------------------|------|---------------|-----|-----------------|------|---------------------------|-----|-------------|
| <b>Parts List</b> | 1    | Billet Grille | 1   | Stainless steel | 3    | U- Clip Nuts              | 4   | 8#          |
|                   | 2    | Two-hole Tabs | 2   |                 | 4    | Truss Head Tapping Screws | 4   | 8# × 3"     |

**Install Notes:** Overlay  Replacement  Drill  Cut

| Step | Description   | illustration   |
|------|---|--|
| 1    | Identify the grille & hardware with parts list.   |  |
| 2    | Optional (for vehicles with black plastic cover under hood). Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation. |  |
| 3    | Center the billet grille into the opening of the factory grille shell. Secure the bolt to the threaded holes on the front of the grille. Be sure the bolts are through the OEM grille shell.  |  |
| 4    | Place a U-clip nut over each of the holes on the two-hole flat tabs. Secure billet grille using the nuts from the back side of the OEM grille shell.  |  |
| 5    | Make sure the billet grille is centered and tighten the fasteners, but do not over-tighten.   |  |
| 6    | Reinstall the black plastic cover which was removed in step 2.  |  |
| 7    | Installation completed!!!   |  |

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!