
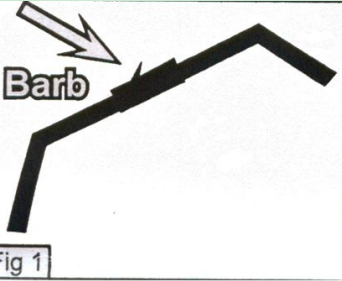
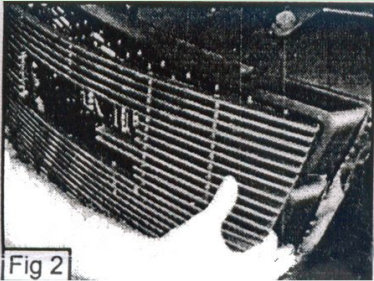

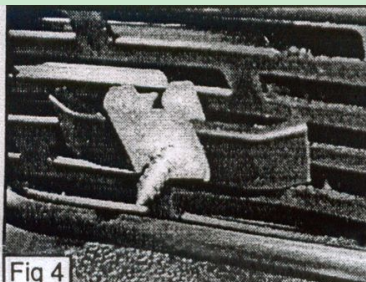


Part#	GR07FFG43A	Application	2010 GMC Terrain Overlay / Bolt-On W/Logo Opening
-------	------------	-------------	---

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Aluminum	3	Screws	4	1 1/2" #6
	2	U Nut Clips	4		4	Flange Brackets	4	2"

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Loosen the radiator top cover and side covers. There are several plastic pop clips that you can pry up with a flathead screwdriver and bolts that require removal. This will allow you to get your hand behind the factory grille to install the hardware.	 
3	Install the U-Nuts onto the flange brackets (Fig 1). With the top radiator cover loose you can now install the billet grille. First place billet grille into the factory grille opening (Fig 2).	
4	Take the four 1 1/4" Screws and insert them through the billet bars and the tabs with holes in them that are welded to the backside of the billet (Fig 3).	
5	Reach behind the factory grille through the open area where the top radiator covers connect and place the four 2" Flange Brackets over the ends of the four screws on the backside of the billet grille (the tapered ends will face toward the front of the vehicle) (Fig 4).	
6	Make sure the billet grille is centered and tighten the fasteners. but do not over-tighten.	
7	Replace the hardware on top radiator covers.	
8	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!