
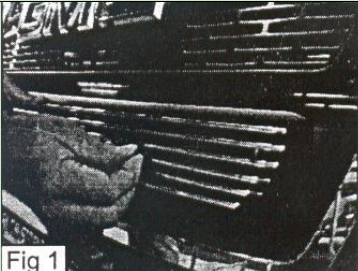
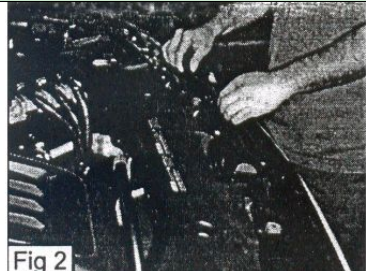


Part#	GR07FFG54A	Application	2010 GMC Terrain – Billet Grille
-------	------------	-------------	----------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	3	Aluminum	3	Screws	6	1 1/4" #8
	2	U Nut Clips	6		4	Flange Brackets	6	2"

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Loosen the radiator top cover and side covers. There are several plastic pop clips that you can pry up with a flathead screwdriver and bolts that require removal. This will allow you to get your hand behind the factory grille to install the hardware.	
3	Take the billet grilles and insert them into the openings in the factory grille shell.	
4	Use the 1 1/4" screws and insert them through the billet bars and through the small square tabs with a hole in them that are welded onto the backside of the billet grilles. (Fig 1)	
5	From the backside of the grille, install the 2" flange brackets with the u nuts installed on the flange bracket, you will need to pull the top part of the factory grille forward to fit your hand behind the grille (Fig 2). The flange bracket will have the bent ends toward the front of the vehicle. Tighten the screws, replace the radiator covers.	 
6	Make sure the billet grille is centered and tighten the fasteners. but do not over-tighten.	
7	Reinstall the black plastic cover which was removed in step 2.	
8	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!