

PATENT PRODUCT

Grille Installation Instruction

Part#	G75049K&S	Application	For 2021-UP GMC Canyon Elevation / AT4
--------------	-----------	--------------------	--


Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	#1	Billet Grille	1	Stainless Steel	#4	Tabs	6	
	#2	Studs	8	#6-32	#5	U-Tabs	2	
	#3	Hex Flange Nuts	8	#6				

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional: pop hood, remove the black plastic cover (on top of OEM grille) from vehicle. If you are still unable to access the rear, remove the grille shell according to factory manual.	
3	Hold the grille shell, remove the black trim strip as shown (By removing the clips from back).	



Front View

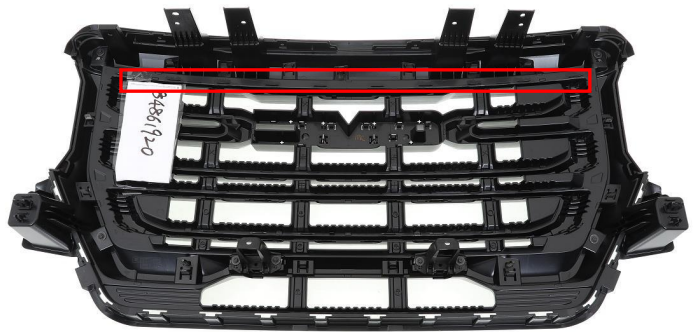


Back View

4	Hold the billet grille against the OEM grille shell, center and mark (8) holes for drilling. Remove billet grille and drill holes according to your mark.
---	---

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	G75049K&S	Application	For 2021-UP GMC Canyon Elevation / AT4
--------------	-----------	--------------------	--

5	Thread a Stud in each nut welded to the grille. From the rear, place a Tab on each Stud. Now thread a Hex Flange Nut on each Stud.
----------	--

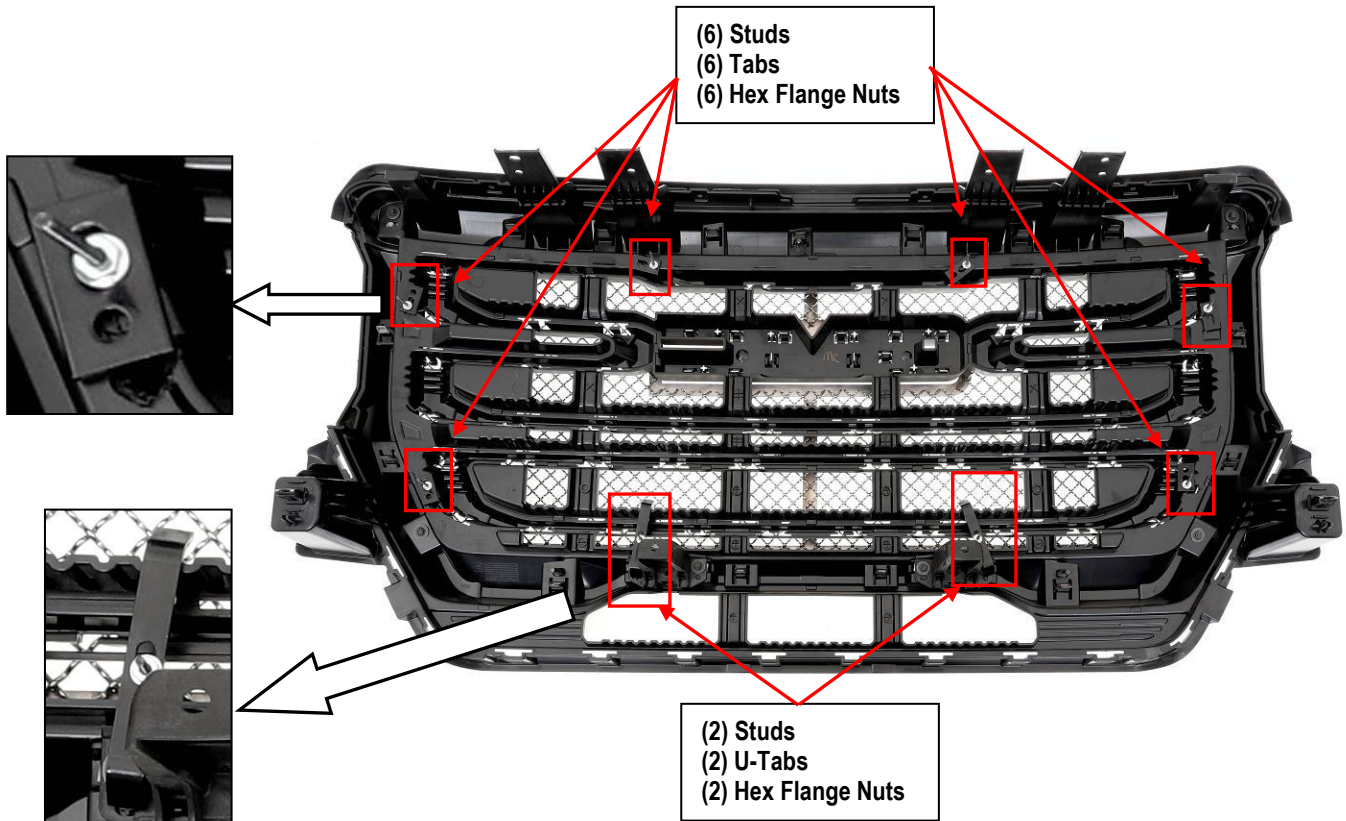

6	Make sure the insert is centered and tighten the hardware.
----------	--

7	Reinstall the plastic shroud with the fasteners removed in Step 2.
----------	--

8	Installation completed.	
----------	-------------------------	--

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!