



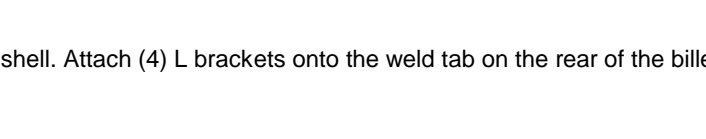






<b>Part#</b>	GR07HED74C/J	<i>Application</i>	<b>For 2004-2012 GMC Canyon</b>
--------------	--------------	--------------------	---------------------------------

	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
<b>Parts List</b>	1	Billet Grille	1	Stainless steel	3	Lock nut	8	1/4" Kep Nuts
	2	L Brackets	4		4	Hex Bolt	3	1/4"-20 x 3/4"

**Install Notes:** Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Remove factory grill shell from the truck.	
3	From the rear of the grill shell, carefully cut out center section of grill leaving approximately 1/8" of plastic above the lip around the edge of the black plastic.	
4	Sand the cut edge down flush to the lip in the factory grill.	
5	Center grill behind opening from back side of the grille shell. Attach (4) L brackets onto the weld tab on the rear of the billet grille.	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR07HED74C/J	Application	For 2004-2012 GMC Canyon
Step	Description	illustration	
6	Using the two (2) brackets with the short leg measuring 1 “, attach your billet grill to the factory grill shell attachment posts at the bottom of the grill. You will need to drill two (2) 1 /4 “ holes to attach the brackets to the grill shell.		
7	Use the other two (2) L brackets to attach the grill at the top of the grill shell. You will need to drill two (2) 1/4“holes to attach the brackets to the grill shell.		
8	Make sure that the grill is all the way forward against the grill shell; if it is not, loosen the bolts and adjust it so that it is.		
9	Reinstall grill shell on vehicle usina factory hardware.		
10	Installation completed!!!		

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!