

Rev. 141001

Part#	GR07LFC62S Application		For 2016-2017 GMC Sierra 1500 Main Upper							
	Item	Part N	Name	QTY	Description	Item	Part Name	QTY	Description	
Parts Lis	t 1	Mesh G	rille	1	Stainless steel	3	Flat Nut	10	10#	
	2	Screw		10	10#X1"					
Install Notes: Overlay \times Replacement $\sqrt{}$ Drill $\sqrt{}$ Cut $\sqrt{}$										
Step	Description					illustration				
1	Identify the grille & hardware with parts list.									
2	Turn off engine and chalk tires with stop block. Open Hood. Disconnect Battery.									
FIG 1	FIG 1									
3	Begin by removing the plastic core support cover shroud. There will a number of plastic "Push Tabs" that secure the cover. Remove them all and aside for reinstallation. Remove cover and set aside for later.									
FIG 4										
4	Remove the factory hardware that secures the grille assembly to the core support.									



Rev. 141001

Part#

5

6

7


GR07LFC62S

Application

For 2016-2017 GMC Sierra 1500 Main Upper



It is now time to loosen the vehicle wheel well fender trim. Start at the top middle, and working your way towards the very front of the fender trim where it meets the front bumper, use a torq bit remove screws. With the front half fender trim loose and pulled out of the way, (as seen in Figure 7) you can access the additional hardware that secure the plastic lower bumper valance. Remove these bolts and set aside all hardware for reinstallation later.

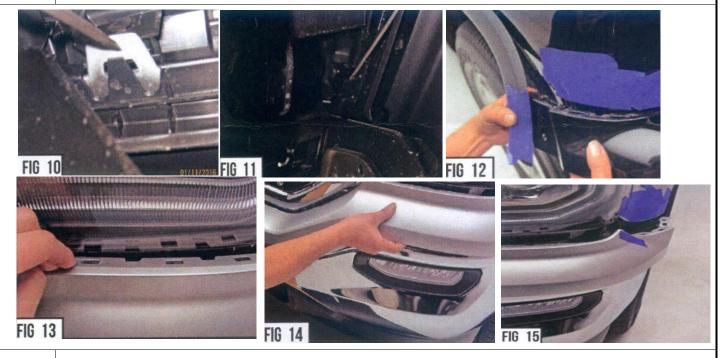

At this point, you need to remove the vehicles plastic lower bumper valance (a long and slim trim panel that is located directly above the front bumper, below the grille, and is usually color matched to the vehicle body color). Slip out the valance away from where it meets the front fender. You will need to unfasten several tabs that latch the whole piece from under and behind bumper and underneath headlights.

With the lower plastic bumper valance removed you can now access several bolts at the bottom below the grille lip and above the vehicle bumper and also located (2) more at the lower corners. Remove all hardware that fixes grilles assembly to vehicle.



11

Grille Installation Instruction

Rev. 141001



With the radiator shroud removed and safely out of the way. It is now time cut into the factory grille plastic pattern design and separate the factory grille shell to re-purpose and utilize with your new grille. From the grilles backside, make a proper cutting path using a paint pen or bright marker to highlight the correct cutting patch along the outer edge of the plastic grille pattern.



Rev. 141001

Part#


GR07LFC62S

Application

For 2016-2017 GMC Sierra 1500 Main Upper





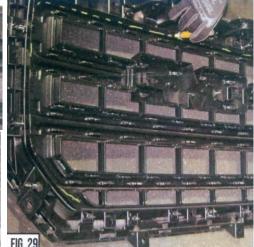


- To gain familiarity it is recommended to examine the grille face and back side so that you understand where you will be cutting and where and how the new Grille will insert and mount to the factory grille shell.
- Using Figures 28 & 29 as reference as proper cut locations around edge and corners, make one final confirmation that your cut line is well clear of the factory chrome shell. You DO NOT want to cut into or damage the chrome shell.

From the grilles backside, use a 90 degree cutoff wheel, zip saw, sawzall or something similar, carefully cut along your marked line.

14 Carefully navigate cutting your corner edges.

Carefully continue your cut path along outer edge without damaging factory.

At this point, check over your work and make certain your cut reflects the images presented here.

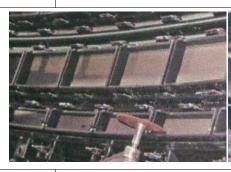

15





Separate the shell from the inner grille piece.







_	UTO PARTS SPECIALIST INC.	O 1111.	o motan		• •	Rev. 141001	
Part#	GR07LFC62S	Application	For 2016	6-2017 GMC Sieri	ra 1500 Ma	in Upper	
16	For those that do want to feature the GMC Badge, you will need to first remove it from the factory grille and set aside for later use.						and set
17	Using a 90 degree sanding disc, sand paper, file, or something of the sort, clean up and sand down the plastic debris left over from the cut out grille piece						
18	Carefully align the grille so that it sits evenly aligned with the shell and then clamp into place with vice grips or something similar. Once satisfied with the alignment and fitment and with the grille insert clamp in place ,drill a 1/8" hole for each of the pre-fixed grille mounting tabs.						
19	Insert provided Screws into each hole drilled.						
20	Slide on flat nut and tighten down.						
21	At this point, you should examine and carefully look over your work. Inspect for proper alignment depth and fitment.						
22	Once satisfied with the grille insert installation, proceed with grille re-assembly.						
23	Take the radiator induction shroud that was set aside earlier and align it over your new Grille assembly. Line up the tabs and set it down in place.						
24	Use the plastic push tabs to secure and fasten down.						



Rev. 141001

Part#	GR07LFC62S	Application	For 2016-2017 GMC Sierra 1500 Main Upper			
25	Take the complete grille assembly, put into place and position to nose of vehicle.					
26	Starting at the top, slip the grille assembly (shell) mounting tabs up and onto their mounts.					
27	Position lower mounts and finally re-install all factory hardware.					
28	Re-install lower bumper valance.					
29	Check over your work for hardware tightness and visual inspection.					
30	At this point you want to look over your work and examine the gap alignments around all edges and in between the new Grille and the vehicle components and body lines. Carefully close the hood for a complete visual inspection. If adjustment is needed, you can remove grille and loosen the hardware mounts and shift side to side or up & down to achieve proper look.					
31	Installation completed!!!					