



PATENT PRODUCT

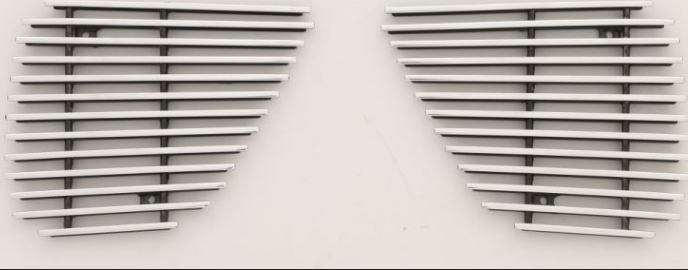
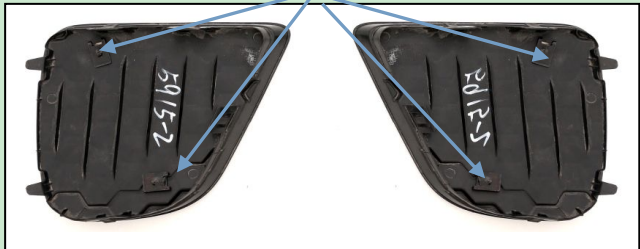

Grille Installation Instruction

Rev. 150115

Part#	GR08FEI15H	Application	2013-2013 Honda Accord Coupe Fog light Cover
--------------	------------	--------------------	--

	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Parts List	1	Billet Grille	1	Aluminum	3	U-Clip Nut	4	8#
	2	Billet Grille	1	Aluminum	4	Screw	4	8#x1"

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If necessary, remove the fog light cover from the vehicle.	
3	Center the billet grilles onto the OEM fog light cover. Mark and drill four holes on to the OEM fog light cover according to the position of the weld tab hole on the billet grilles. Secure the billet grilles onto the OEM fog light cover with the 8# screws and U-clip nuts. Make sure the screws are through the drilled holes	<div style="border: 1px solid black; padding: 5px; display: inline-block; margin-bottom: 5px;">Screws & U-Nuts</div> 
4		
5	Make sure the billet grille is centered and tighten the fasteners.	
6	Reinstall the black plastic cover which was removed in step 2.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!