



PATENT PRODUCT



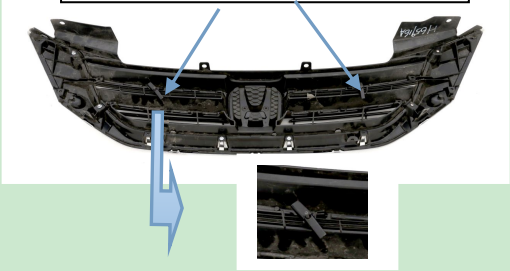

Grille Installation Instruction

Rev. 150116

Part#	GR08FE116A	Application	2013-2015 Honda Accord Sedan Main Upper
--------------	------------	--------------------	-----------------------------------------

	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Parts List	1	Billet Grille	1	11 Billets	3	Bolt	2	6#-32x2"
	2	Toggle Nut	2	6#-32"	4			

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	
3	Before you install the new billet grille, please check if the OEM grille chrome pieces bar whether against new grille or not, if it does, remove those chrome bars before you install the new grille.	 <p style="color: red; font-size: small;">If the chrome pieces against grille, please remove those bars before you install.</p>
4	Center the billet grille into the opening of the factory grille shell. Secure the bolt to the threaded holes on the front of the grille. Be sure the bolts are through the OEM grille shell.	
5	Secure billet grille using the toggle nuts from the back side of the OEM grille shell.	<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;">Bolts & Toggle Nuts</div> 
6	Make sure the billet grille is centered and tighten the fasteners.	
7	Reinstall the black plastic cover which was removed in step 2.	
8	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!