
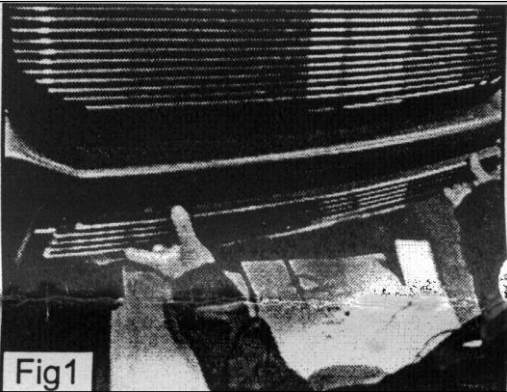


| | | | |
|-------|--------------|-------------|-------------------------------|
| Part# | GR08FFH48A/H | Application | For 2009-2011 Honda Ridgeline |
|-------|--------------|-------------|-------------------------------|

| Parts List | Item | Part Name | QTY | Description | Item | Part Name | QTY | Description |
|------------|------|-----------------|-----|-------------|------|------------|-----|-------------|
| | 1 | Billet Grille | 1 | Aluminum | 3 | Screws | 2 | 6-32X2" |
| | 2 | Nylon Lock Nuts | 2 | 6-32 | 4 | L Brackets | 2 | |

Install Notes: Overlay Replacement Drill Cut

| Step | Description | illustration |
|------|---|---|
| 1 | Identify the grille & hardware with parts list. |  |
| 2 | Optional (for vehicles with black plastic cover under hood), Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation. | |
| 3 | Take the grille and insert it into the factory grille shell (Fig 1) . |  |
| 4 | Next take the (2) 2" screws and insert them through the front of the billet grille where the small tabs with a hole in the center are welded to the back of the billet grille. On the backside of the billet, from under the vehicle place the L brackets over the screws and latch it over the vertical plastic bar in the factory bumper opening. Take the (2) nylon lock nuts and place them on the screws on top of the L brackets and tighten. | |
| 5 | Make sure the grille is centered and tighten the fasteners. | |
| 6 | Reinstall the black plastic cover which was removed in step 2. | |
| 7 | Installation completed!!! | |

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!