

PN: GR08HFF16H
07-08 Acura MDX – Billet Grille

Hardware

2 -- #8 Screws	2 -- Speed Clips	4 -- K-Lock Nuts
2 -- Powder Coated Long L-Brackets		2 -- 1" Allen Head Bolts
2 -- 1 1/4" Fully Threaded Studs		2 -- Powder Coated Short L-Brackets

(1) Using a flat blade screw driver remove the clips the hold down the plastic filler panel.

Figure 1

(2) Remove the plastic filler panel.

(3) Using a flat blade screwdriver remove the plastic clips that hold the upper portion of the factory grille shell. Figure 2

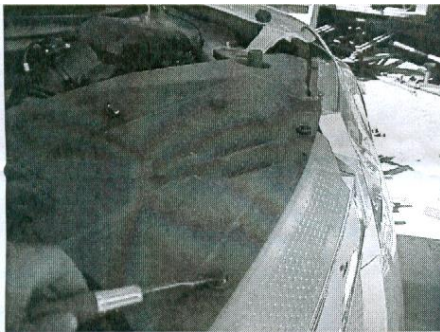


Figure 1

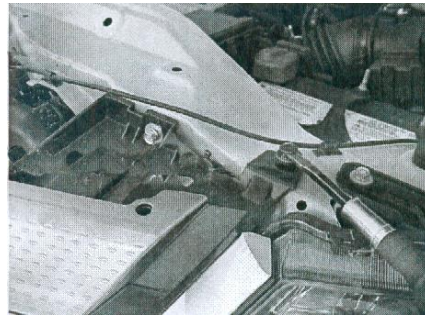


Figure 2

(4) Remove the two bolts from the top side of the factory grille shell.

(5) Using a flat blade screwdriver remove the plastic clips from the lower side of the factory grille shell. Figure 3

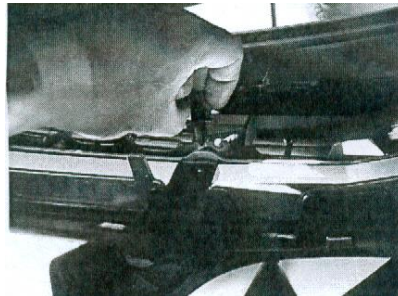


Figure 3

(6) Once all of the factory clips and bolts are removed it is now time to remove the factory grille shell from the vehicle.

FOR UPPER BILLET GRILLE:

(7) Center the billet grille into the factory grille shell opening and mark and drill the lower mounting points.

(8) Attach the lower portion of the billet grille to the vehicle using the supplied speed clips and #8 screws. Figure 4

- (9) Using the Allen head bolts and k-lock nuts attach the long end of the powder coated L-brackets to the tabs at the top of the billet grille. Figure 5.
- (10) Using the bolts removed in step 4 loosely attach the powder coated L-brackets to the factory mounting points. Figure 5

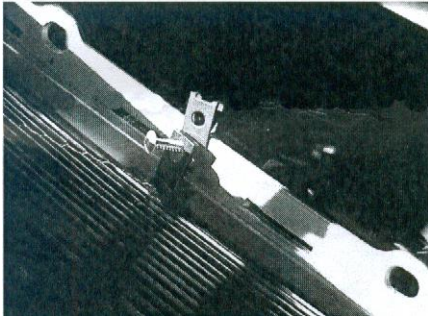


Figure 4

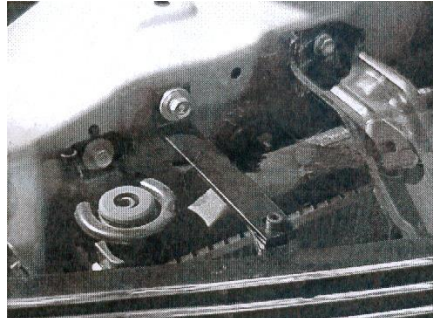


Figure 5

- (11) Make sure that the billet grille is centered to your liking and secure all hardware.
- (12) Installation is now complete!

FOR BUMPER BILLET GRILLE:

- (7) Install the fully threaded studs into the threaded tabs on the backside of the billet grille.
- (8) Center the billet grille into the bumper opening and hold in place.
- (9) Install the powder coated L-brackets over the fully threaded studs with the short leg of the bracket over the lower lip of the bumper opening.
- (10) Using the k-lock nuts secure the billet grille to the vehicle.
- (11) Installation is now complete!

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!