



PATENT PRODUCT Grille Installation Instruction

Rev. 20201201

| | | | |
|--------------|-------------|--------------------|-------------------------|
| Part# | H86616C&J&S | Application | For 2007-2009 Acura MDX |
|--------------|-------------|--------------------|-------------------------|

| Parts List | Item | Part Name | QTY | Description | Item | Part Name | QTY | Description |
|------------|------|---------------|-----|-----------------|------|--------------------------------|-----|-------------|
| | #1 | Billet Grille | 1 | Stainless Steel | #5 | Allen Head Bolts | 2 | 1" |
| | #2 | U-Clip Nuts | 2 | | #6 | Powder Coated Long L-Brackets | 2 | |
| | #3 | K-Lock Nuts | 4 | | #7 | Fully Threaded Studs | 2 | 1 1/4" |
| | #4 | Screws | 2 | 8# | #8 | Powder Coated Short L-Brackets | 2 | |

Install Notes: Overlay Replacement Drill Cut

| Step | Description | illustration |
|------|---|--------------|
| 1 | Identify the grille & hardware with parts list. | |
| 2 | Using a flat blade screw driver remove the clips the hold down the plastic filler panel. (Fig 1) | |
| 3 | Remove the plastic filler panel. | |
| 4 | Using a flat blade screwdriver remove the plastic clips that hold the upper portion of the factory grille shell. (Fig 2) | |

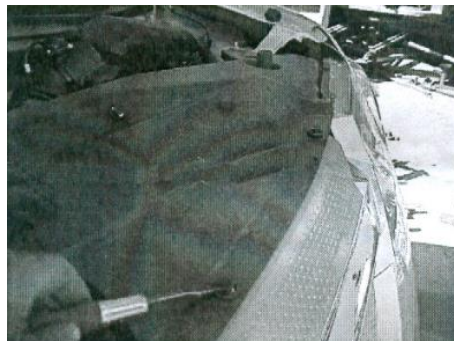


Figure 1



Figure 2

| | | |
|---|---|--|
| 5 | Remove the (2) bolts from the top side of the factory grille shell. | |
|---|---|--|

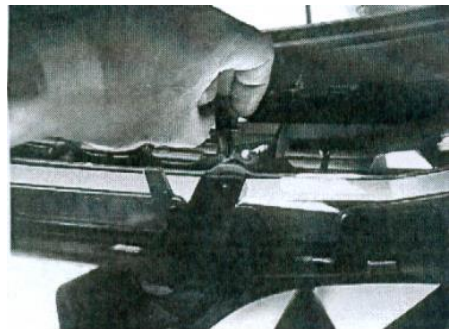
| | | |
|---|---|--|
| 6 | Using a flat blade screwdriver remove the plastic clips from the lower side of the factory grille shell. (Fig 3) |  |
|---|---|--|

Figure 3

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

| | | | |
|--------------|-------------|--------------------|-------------------------|
| Part# | H86616C&J&S | Application | For 2007-2009 Acura MDX |
|--------------|-------------|--------------------|-------------------------|

| | |
|----------|---|
| 7 | Once all of the factory clips and bolts are removed it is now time to remove the factory grille shell from the vehicle. |
|----------|---|

FOR UPPER BILLET GRILLE:

| | |
|----------|--|
| 8 | Center the billet grille into the factory grille shell opening and mark and drill the lower mounting points. |
|----------|--|

| | |
|----------|--|
| 9 | Attach the lower portion of the billet grille to the vehicle using the supplied U-Clip Nuts and Screws. (Fig 4) |
|----------|--|

| | |
|-----------|--|
| 10 | Using the Allen Head Bolts and K-Lock Nuts attach the long end of the Powder Coated L-Brackets to the tabs at the top of the billet grille. (Fig 5) |
|-----------|--|

| | |
|-----------|---|
| 11 | Using the bolts removed in step 4 loosely attach the Powder Coated L-Brackets to the factory mounting points. (Fig 5) |
|-----------|---|

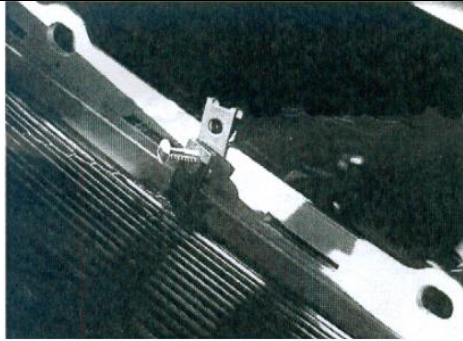


Figure 4

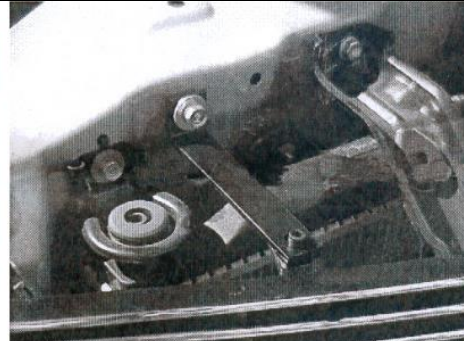


Figure 5

| | |
|-----------|--|
| 12 | Make sure the insert is centered and tighten the hardware. |
|-----------|--|

| | |
|-----------|-------------------------|
| 13 | Installation completed. |
|-----------|-------------------------|

FOR BUMPER BILLET GRILLE:

| | |
|-----------|---|
| 14 | Install the Fully Threaded Studs into the threaded tabs on the backside of the billet grille. |
|-----------|---|

| | |
|-----------|---|
| 15 | Center the billet grille into the bumper opening and hold in place. |
|-----------|---|

| | |
|-----------|--|
| 16 | Install the Powder Coated L-Brackets over the Fully Threaded Studs with the short leg of the bracket over the lower lip of the bumper opening. |
|-----------|--|

| | |
|-----------|--|
| 17 | Using the K-Lock Nuts secure the billet grille to the vehicle. |
|-----------|--|

| | |
|-----------|-------------------------|
| 18 | Installation completed. |
|-----------|-------------------------|

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!