
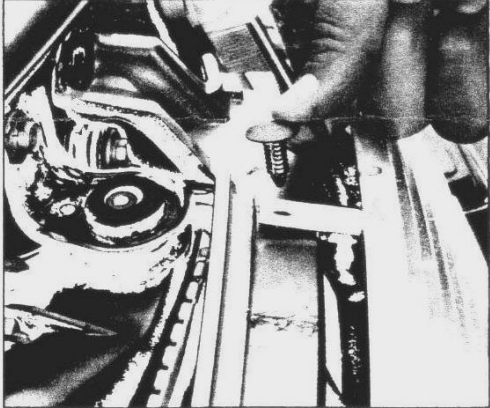


|              |              |                    |   |
|--------------|--------------|--------------------|---|
| <b>Part#</b> | GR08HGA00A/H | <b>Application</b> | <b>For 2006-2008 Honda Civic Coupe Not For SI Model</b> |
|--------------|--------------|--------------------|---|

| <b>Parts List</b> | Item | Part Name     | QTY | Description | Item | Part Name          | QTY | Description |
|-------------------|------|---------------|-----|-------------|------|--------------------|-----|-------------|
|                   | 1    | Billet Grille | 1   | Aluminum    | 4    | Screws             | 4   | 8# × 1"     |
|                   | 2    | U-Nut         | 4   | 8#          | 5    | Plastic Fasteners  | 4   |             |
|                   | 3    | J Hooks       | 2   | 1.5"        | 6    | Extension brackets | 2   |             |

**Install Notes:** Overlay  Replacement  Drill  Cut

| Step | Description   | illustration   |
|------|---|--|
| 1    | Identify the & hardware with parts list.  |    |
| 2    | Remove the fasteners holding the radiator cover in place; remove the cover. Remove the bolts securing the bumper cover to the core support (located near the radiator mounts). Pull the bumper cover forward; remove the nine small Phillips screws securing the grille. Now unfasten the molded clips and separate the grille. If a bumper billet is going to be installed; install at this time and then proceed to Step 3. |  |
| 3    | Test fit the billet insert into the opening. If the paint from the bumper cover stands out; a coat of flat black paint will help the polished bars stand out on lighter color vehicles.   |  |
| 4    | Slide the u-nuts onto the J hooks and extension brackets. Use the screws to attach the J hooks (center tabs) and the extensions (outer tabs). Center the grille and wrap the J hooks around the plastic in the bumper cover plastic. The extension brackets align to the bumper cover. Drill a 1/4" hole into the plastic. Secure the other end using the plastic fasteners (picture).  |  |
| 5    | Make sure the billet grille is centered and tighten the fasteners, but do not over-tighten.   |  |
| 6    | Reinstall the radiator cover which was removed in step 2.   |  |
| 7    | Installation completed!!!   |  |

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!