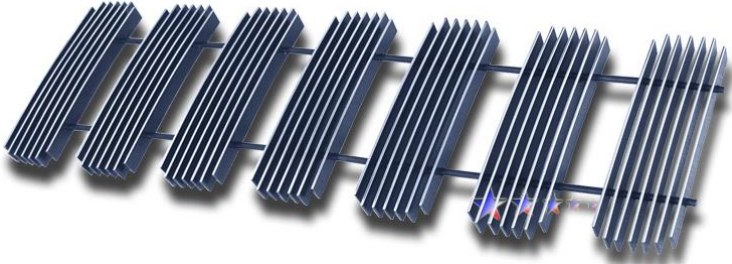
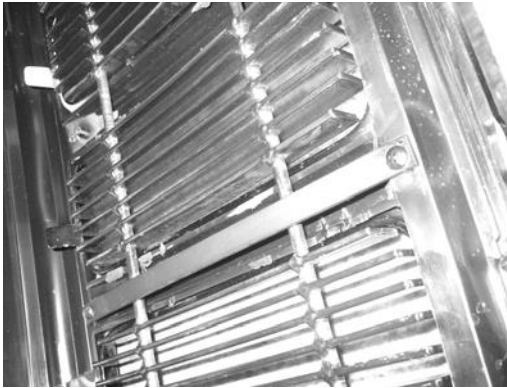



| | | | |
|-------|--------------|-------------|------------------------------|
| Part# | GR10FED99V/E | Application | For 2006-2010 Jeep Commander |
|-------|--------------|-------------|------------------------------|

| Parts List | Item | Part Name | QTY | Description | Item | Part Name | QTY | Description |
|------------|------|---------------|-----|-------------|------|-----------|-----|-------------|
| | 1 | Billet Grille | 7 | Aluminum | 3 | Screws | 8 | 8#×3/4" |
| | 2 | Flat Brackets | 4 | 1/2"X9 3/4" | | | | |

Install Notes: Overlay Replacement Drill Cut

| Step | Description | illustration |
|------|---|--|
| 1 | Identify the grille & hardware with parts list. |  |
| 2 | Optional (for vehicles with black plastic cover under hood), pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation. | |
| 3 | Test fit the billet insert into the grille. The picture shows how the brackets hold the billet in place. | |
| 4 | Center the grille and drill a 1/8" hole at each bracket. Do not drill through the face of the grille. Use the #8 screws to secure the billet in place. | |
| |  |  |
| 5 | Make sure the billet grille is centered and tighten the fasteners. But do not over-tighten. | |
| 6 | Reinstall the black plastic cover which was removed in step 2. | |
| 7 | Installation completed!!! | |

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!