



Grille Installation Instruction


Rev. 191201

Part#	GR10FEE38V&E	Application	For 2006-2010 Jeep Compass
-------	--------------	-------------	----------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Aluminum	3	U- Clip Nuts	14	8#
	2	Tabs	14		14	Truss Head Tapping Screws		8×1 1/4"

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list. Identify grille No# as shown below. The grille No# can be found on the side or back side of each grille. Test fit the grilles first to identify the top grille from the bottom grille. They will only fit in one direction correctly.	

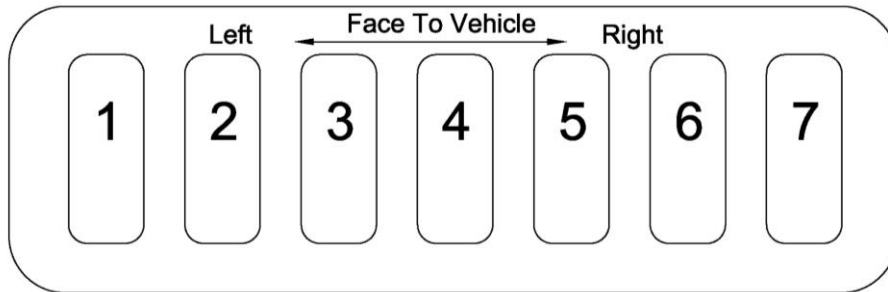

Grille No# Identify

2	Place one screw through each of the welded tabs on the billet grille. Place a U-clip nut over each of the holes on the single hole tab.
3	Where the screws come through the grille shell, place a tab in align with the screw and tighten. Tighten each of the screws evenly so as not to put the grille in a bind and not to make it go off center.
4	Repeat steps 2 and 3 for the others.
5	Installation completed.

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!