



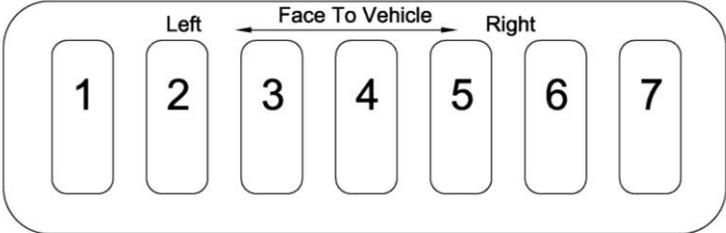
PATENT PRODUCT Grille Installation Instruction

Rev. 20201101

Part#	J65538C&J&S	Application	For 2006-2010 Jeep Compass
--------------	-------------	--------------------	----------------------------

	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Parts List	#1	Billet Grille	1	Stainless Steel	#3	U-Clip Nuts	14	8#
	#2	Tabs	14		#4	Truss Head Tapping Screws	14	8x1 1/4"

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional: pop hood, remove the black plastic cover (on top of OEM grille) from vehicle. If you are still unable to access the rear, remove the grille shell according to factory manual.	
3	Identify grille No# as shown below. The grille No# can be found on the side or back side of each grille. Test fit the grilles first to identify the top grille from the bottom grille. They will only fit in one direction correctly.	 <p style="text-align: center;">Grille No# Identify</p>
4	Install the U-Clip Nuts onto the tabs as shown.	
5	Thread a Screw in each nut welded to the grille. Secure billet grille using the U-Clip Nuts and Tabs from the back side of the grille shell. Make sure the insert is centered and tighten the hardware.	
6	Reinstall the plastic shroud with the fasteners removed in Step 2.	
7	Installation completed.	

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!