



# PATENT PRODUCT




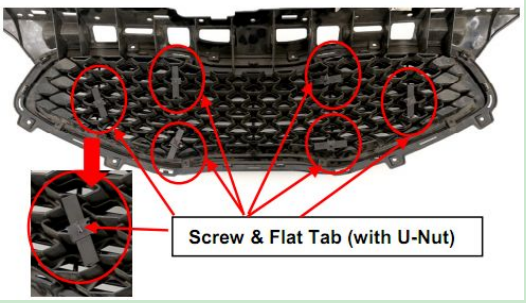

## Grille Installation Instruction

Rev. 150116

<b>Part#</b>	GR11FEI55H	<b>Application</b>	2014-On Kia Cadensa Main Upper					
--------------	------------	--------------------	--------------------------------	--	--	--	--	--

	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
<b>Parts List</b>	1	Billet Grille	1	15 Billets	4	U-Nut	6	8#
	2	Screw	6	8#x2 1/2"	5	Flat Tab	6	

**Install Notes:** Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If necessary, remove the OEM grille or front bumper from the vehicle for installing.	
	Install the u-nuts onto the flat tabs.	
3	Center the billet grille onto the factory grille.	
4	Insert the 8# screws through the weld tab holes on side. And then secure billet grille using the screws, flat tabs (with U- nuts) at the rear of OEM grille.	
5	Make sure the billet grille is centered and tighten the fasteners.	
6	Reinstall the black plastic cover which was removed in step 2.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!