
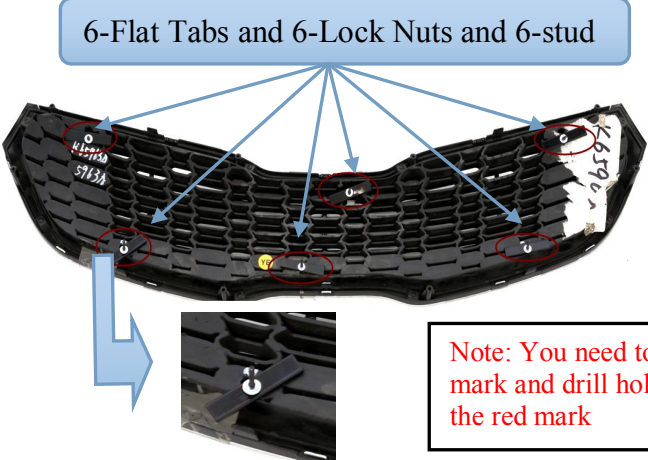
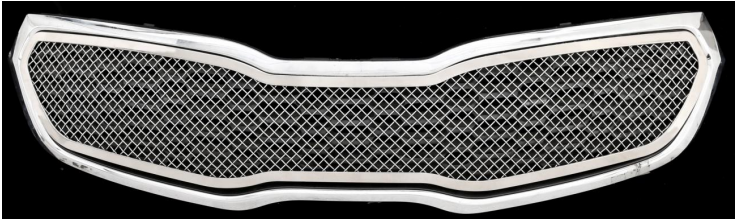


Part#	<b>GR11GEI63T</b>	Application	<b>2014-2015 Kia Forte Main Upper</b>
-------	-------------------	-------------	---------------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	3	Lock Nut	6	6-32
	2	Flat Tab	6	/	4	Stud	6	6-32×2"

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	You may need to remove the black plastic cover from vehicle. This will allow access to the rear of the grille shell.	N/A
3	Test fit the mesh grille in the factory bumper opening. On the backside of the mesh grille are two threaded studs. Note where they make contact with the plastic in the factory bumper opening and mark the point of contact. Now drill hole through the plastic in the factory bumper opening where you made the contact marks.(You need mark and drill six holes at the around). Now insert the mesh grille into the factory bumper opening with the threaded studs on the mesh grille going through the holes that you just drilled.	
5	Secure grille using the flat tabs and lock nuts from the back side of the OEM grille shell.	 <p>6-Flat Tabs and 6-Lock Nuts and 6-stud</p> <p>Note: You need to mark and drill holes in the red mark</p>
6	Make sure the grille is centered and tighten the fasteners.	N/A
7	Reinstall the black plastic cover which was removed in step 2.	N/A
8	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!