

Part#	GR12FFE95V	Application	03-06 Lincoln Avator – Vertical Billet Grille
-------	------------	-------------	---

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Aluminum	3	Phillips Machine Screws	5	M4 × 30mm
	2	Metal Brackets	5	60mm	4	Flange Nuts	5	M4

Install Notes: Overlay



Replacement

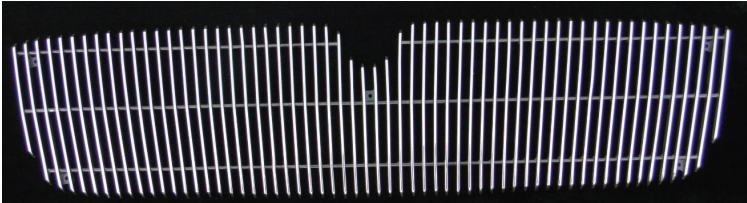

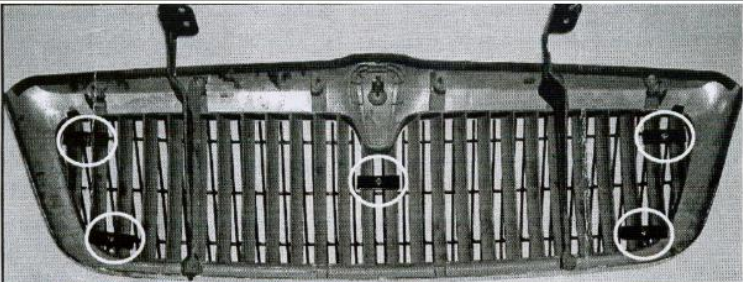


Drill



Cut



Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop Hood, remove plastic shroud at the top and set fasteners aside. Optional: Using factory instructions, remove the entire front grille shell (as pictured in all Figures).	
3	Position the Billet Grille onto grille shell cavity (Figure 2).	 Figure 2 – Front view of positioning lower Billet Grille
4	Loosely attach the Billet Grille by holding the Metal Brackets behind factory grille shell and inserting the Phillips Screws (from the front) through the Billet Grille holes and Metal Brackets, secure them with Flange Nuts provided (Figure 3).	
5	Once the Billet Grilles are loosely attached, center them and tighten all Phillips Screws at the same rate.	
6	Reinstall the black plastic cover which was removed in step 2.	N/A
7	Installation completed!!!	N/A

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!