

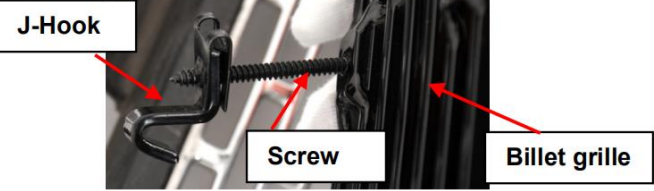
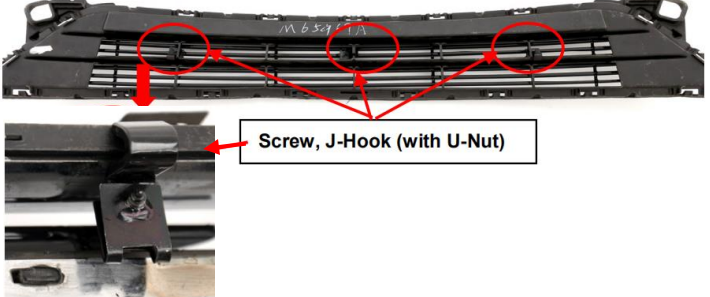



| | | | |
|-------|--------------|-------------|-----------------------|
| Part# | GR13FEI69A/H | Application | For 2014-2016 Mazda 6 |
|-------|--------------|-------------|-----------------------|

| Parts List | Item | Part Name | QTY | Description | Item | Part Name | QTY | Description |
|------------|------|---------------|-----|-------------|------|-----------|-----|-------------|
| | 1 | Billet Grille | 1 | Aluminum | 3 | U- Nut | 3 | 8# |
| | 2 | J- Hooks | 3 | | 4 | Screw | 3 | 8# x 1.5" |

Install Notes:
 Overlay
 Replacement
 Drill
 Cut

| Step | Description | illustration |
|------|--|--|
| 1 | Identify the grille & hardware with parts list. |  |
| 2 | Install the U-Nuts on the J-hooks. |  |
| 3 | Insert the 8# screws through the weld tab holes on the billet grille from front side. And secure the J-Hooks (with U-Nuts) to the screws. |  |
| 4 | Center the billet grille (with screws, J Hooks) onto the OEM grille. Insert the J-Hooks to the rear of the OEM grille through the gaps on OEM grille. Secure the billet grille onto the OEM grille using the hooks & screws. |  |
| 5 | Make sure the billet grille is centered and tighten the fasteners. | |
| 6 | Installation completed!!! |  |

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!