

PATENT PRODUCT

Grille Installation Instruction


Rev. 20230801


Part#	N65566C&J&S	Application	For 2009-2014 Nissan Murano With Bar Style OE Grille
--------------	-------------	--------------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	#1	Billet Grille	1	Stainless Steel	#3	Toggle Nuts	4	6#
	#2	Bolts	4	6#-1.5"				

Install Notes: Overlay ☒ Replacement ☐ Drill ☐ Cut ☐

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional: pop hood, remove the black plastic cover (on top of OEM grille) from vehicle. If you are still unable to access the rear, remove the grille shell according to factory manual.	
3	Center the billet grille onto the OEM grille. Thread a bolt in each nut welded to the grille. Secure billet grille with the toggle nuts on to the bolts from the rear of the OEM grille.	

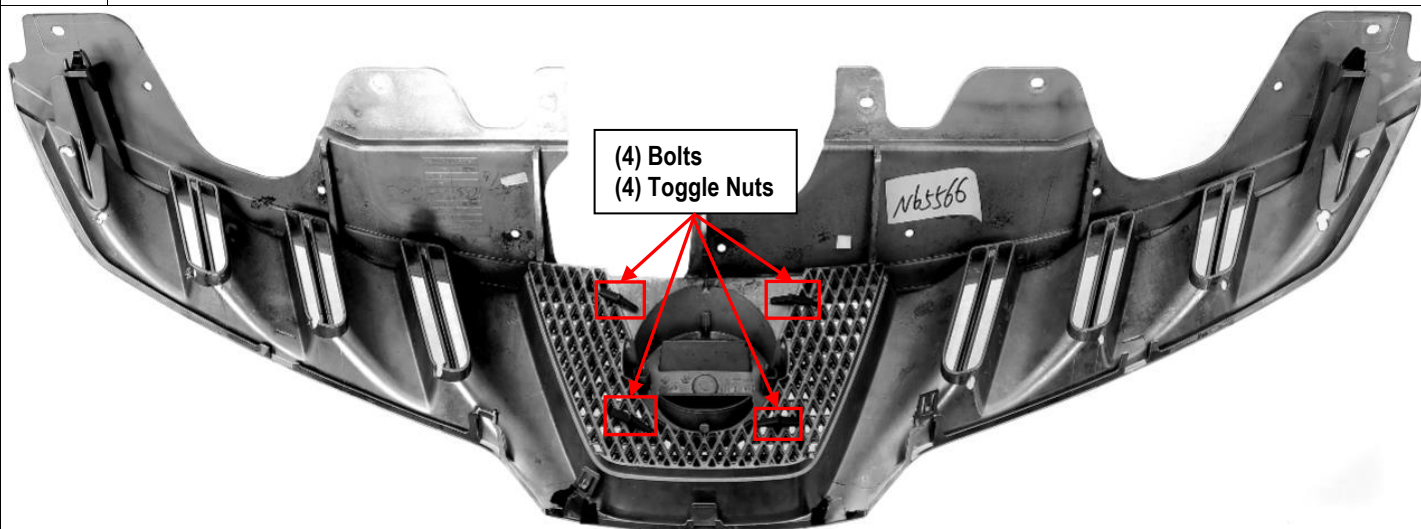

4	Make sure the insert is centered and tighten the hardware.	
5	Reinstall the plastic shroud with the fasteners removed in Step 2.	
6	Installation completed.	

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!