
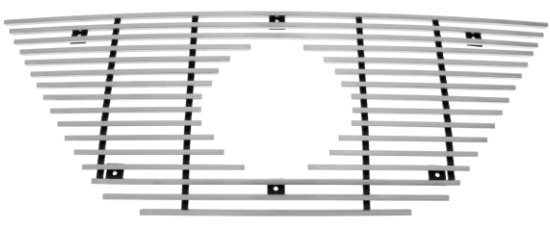
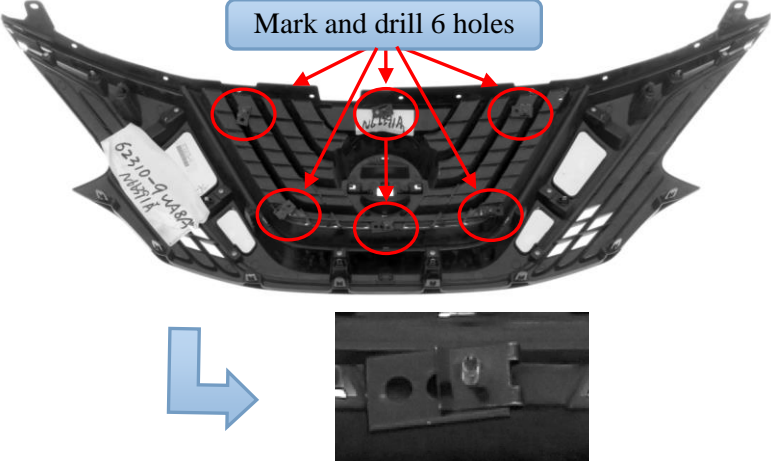


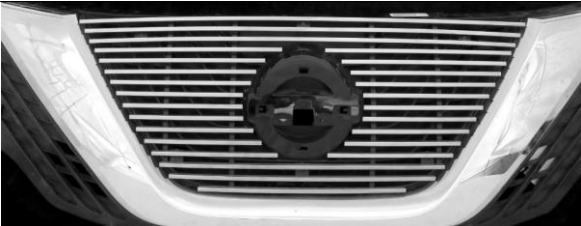

# PATENT PRODUCT

## Grille Installation Instruction

Rev. 190301

| Part#   | GR14FFC91C/S/J  |               | Application | For 2015-2018 Nissan Murano With Logo Show Main Upper                                |      |             |     |             |
|---|---|---------------|-------------|--|------|-------------|-----|-------------|
| Parts List  | Item  | Part Name     | QTY         | Description  | Item | Part Name   | QTY | Description |
|   | 1   | Billet Grille | 1           | Stainless steel  | 3    | U-Clip Nuts | 6   | 8#          |
|   | 2   | Flat Tabs     | 6           |  | 4    | Screws      | 6   | 8#×2.5"     |
| <b>Install Notes:</b> Overlay <input checked="" type="checkbox"/> Replacement <input type="checkbox"/> Drill <input checked="" type="checkbox"/> Cut <input type="checkbox"/> |   |               |             |  |      |             |     |             |
| Step  | Description   |               |             | illustration   |      |             |     |             |
| 1   | Identify the grille & hardware with parts list.   |               |             |    |      |             |     |             |
| 2   | Optional (for vehicles with black plastic cover under hood), Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation. |               |             |  |      |             |     |             |
| 3   | Hold the grille against the OEM grille shell, center and mark holes for drilling. Remove grille and drill holes according to your mark. Be sure the screws are through the OEM grille shell..   |               |             |  |      |             |     |             |
| 4   | Secure grille using the flat tabs and U-Clip nuts from the back side of the OEM grille shell.   |               |             |  |      |             |     |             |
| 5   | Make sure the grille is centered and tighten the fasteners.   |               |             |  |      |             |     |             |
| 6   | Reinstall the black plastic cover which was removed in step 2.  |               |             |  |      |             |     |             |
| 7   | Installation completed!!!   |               |             |  |      |             |     |             |

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!