
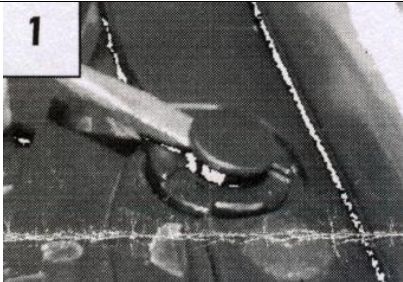
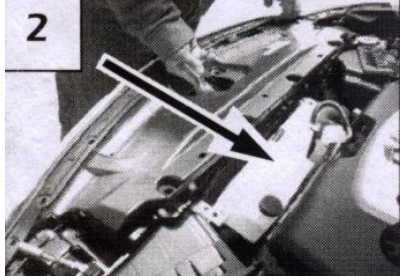
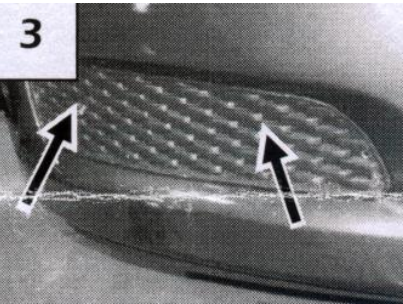


Part#	GR14FFH86J	Application	<b>For 2007-2008 Infiniti G35 Sedan Not For Sport Model</b>
-------	------------	-------------	---

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	3	Stainless steel	4	Screws	6	#8×1 1/4"
	2	J Hook Brackets	2	1 1/4	5	Flat Nuts	4	8#
	3	U-Nuts	2	8#				

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	<p>Test fit the three grilles into the bumper; identify the correct locations.</p> <p>The grille must be removed to install bumper inserts. Remove six plastic fasteners along the top of the grille; use a small screwdriver to pull the center from each fastener.</p>	
3	<p>Remove five 10mm bolts securing the radiator cover.</p> <p>Remove two 10mm bolts securing the coolant overflow tank; slide it back for clearance.</p> <p>Next, push the radiator cover back, depress the clips securing a wiring harness to the cover, remove.</p> <p>Remove five 10mm bolts behind the grille. Depress the molded clips retaining the grille and remove.</p>	
4	<p>Place a side grille into the correct bumper opening. Mark the grille mounting tabs to the factory insert. Drill a 1/8" hole aligned with each mark (3).</p> <p>Center the grille; insert a screw into each tab. From behind the bumper, secure a #8 flat nut. Tighten hardware and repeat on the other side.</p> <p>Slide the u-nuts onto the J hook bracket. Insert screws into tabs on the center grille. Center the grille into the bumper. Attach the J hooks to the screws; wrap the hook around bumper crossbars. Tighten the hardware until the grille is held in place.</p>	
5	Make sure the billet grille is centered and tighten the fasteners. but do not over-tighten.	
6	Reinstall the black plastic cover which was removed in step 2.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!