

Grille Installation Instruction

Rev. 200801


Part#	GR14FGH14A	Application	For 2008-2015 Nissan Titan	

	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	4	Aluminum	5	Screws	8	8# × 3"
Parts List	2	Flat Tabs	8		6	U- Clip Nuts	16	8#
	3	L Shape Tabs	4		7	Lock Nuts	2	10-24
	4	Truss Head Tapping Screws	8	8×5/8"	8	Truss Head Screws	2	10-24×2″

Install Notes: Overlay \times Replacement $\sqrt{}$ Drill $\sqrt{}$ Cut $\sqrt{}$

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional (for vehicles with black plastic cover under hood), pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable access the rear, remove the grille shell and reattach after installation.	

- Start with the main grille. Remove the grille from the box. Test fit the grille to make sure that it fits in the shell properly. Make sure the grille is centered.
- 4 Place one screw through each of the welded tabs on the billet grille.
- 5 Place a U-clip nut over each of the holes on the flat tabs.
- Place a tab behind the grille shell in line with were the screw comes through. Tighten each of the screws evenly so as not to put the grille in a bind and not to make it go off center.
- Move on to the bumper grille. Remove the plastic bumper shroud from the bumper. Place the U-Clips on the short leg of the supplied hardware. Attach the short leg of the L shape tabs to the grille, using the #8 screws.

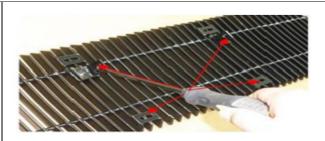

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.

Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.

We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Grille Installation Instruction

Rev. 200801

Part	# GR14FGH14A	Application	For 20	2008-2015 Nissan Titan				
8	Center the billet/SS. grille in the plastic shroud with the polished surface flush with the face of the shroud.							
9	Mark the location of the 4 slots in the long leg of the brackets on the plastic shroud. And the drill 1/8hole in each of the marked location.							
10	Place the U-Clips over the (4) holes just drilled, and attach the grille assembly to the plastic shroud supplied #8 screws.							
11	11 If your vehicle is equipped with a license plate holder perform the following 3 steps, otherwise skip t							
12	At each corner drill a 3/16"hole 1 3/4"from the outside top edges and 3/8"down from the top edges. Using a saw, remove the (2) raised bosses on the back of the holder.			Prill 2 3/16" holes Remove 2 raised bosses				
				These two tabs are for attaching the holder				
14	Remove the (4) screws hol brackets. And attach the ho #10X2"bolts and nuts thru to billet grille.as shown in P5.	older using the suppl	ied					
15	Re-install the plastic shroud into the bumper. Re-attach the grille to the brackets on the shroud.							
16	Make sure the billet grille is centered and tighten the fasteners, but do not over-tighten.							
17 Reinstall the black plastic cover which was removed in step 2.				ep 2.				
18	Installation completed!!!							

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.

Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.

We are not responsible for any damage caused by the installation. Thank you for choosing our product!