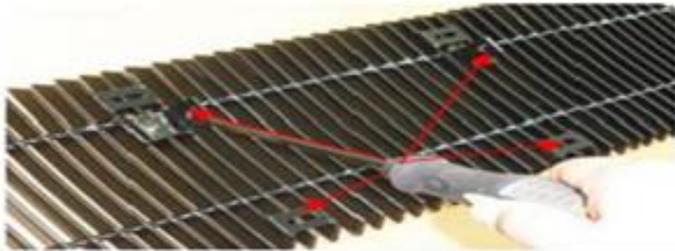



Part#	GR14FGH14C	Application	2008-2015 Nissan Titan
-------	------------	-------------	------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	4	Stainless steel	5	Screws	8	8# × 3"
	2	Flat Tabs	8		6	U- Clip Nuts	16	8#
	3	L Shape Tabs	4		7	Truss Head Tapping Screws	8	8x5/8"
	4	Truss Head Screws	2	10-24x2"	8	Lock Nuts	2	10-24

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	Illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	
3	Start with the upper section. Remove the grille from the box. Test fit the grille to make sure that it fits in the shell properly. Make sure the grille is centered.	
4	Place one screw through each of the welded tabs on the billet grille.	
5	Place a U-clip nut over each of the holes on the flat tabs.	
6	Place a tab behind the grille shell in line with where the screw comes through. Tighten each of the screws evenly so as not to put the grille in a bind and not to make it go off center.	
7	Make sure the billet grille is centered and tighten the fasteners, but do not over-tighten.	
8	Continue to the lower section. Place the U-Clips on the short leg of the supplied hardware.	
9	Attach the short leg of the L shape tabs to the grille, using the #8 screws.	
10	Center the billet/SS. grille in the plastic shroud with the polished surface flush with the face of the shroud.	
11	Mark the location of the 4 slots in the long leg of the brackets on the plastic shroud. And the drill 1/8 hole in each of the marked location.	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.  
 Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.  
 We are not responsible for any damage caused by the installation. Thank you for choosing our product!

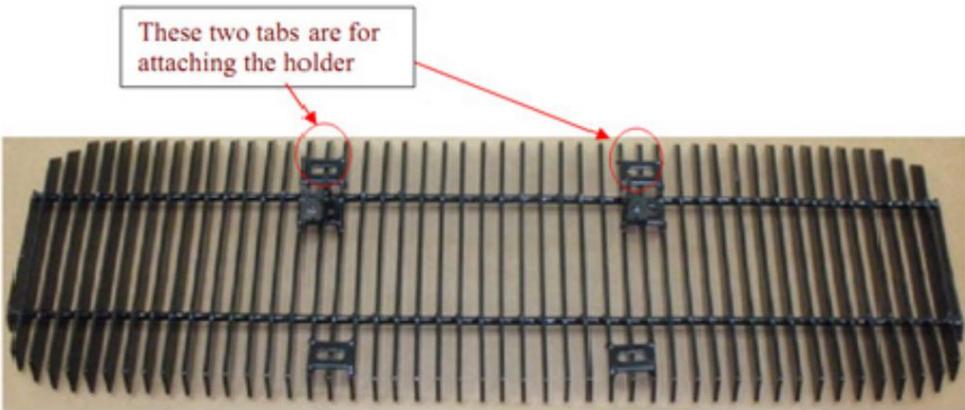Part#	GR14FGH14C	Application	2008-2015 Nissan Titan
12	Place the U-Clips over the (4) holes just drilled, and attach the grille assembly to the plastic shroud with the supplied #8 screws.		
13	If your vehicle is equipped with a license plate holder perform the following 3 steps, otherwise skip to 9.		
14	At each corner drill a 3/16" hole 1 3/4" from the outside top edges and 3/8" down from the top edges.		
15	Using a saw, remove the (2) raised bosses on the back of the holder.		
16	Using the tab at the between of product and license plate holder		
17	Remove the (4) screws holding the billet grille to the brackets. And attach the holder using the supplied #10X2" bolts and nuts thru the bottom most tabs on the billet grille.as shown in P5.		
18	Re-install the plastic shroud into the bumper. Re-attach the grille to the brackets on the shroud.		
19	Reinstall the black plastic cover which was removed in step 2.		
20	Installation completed!!!		

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!