

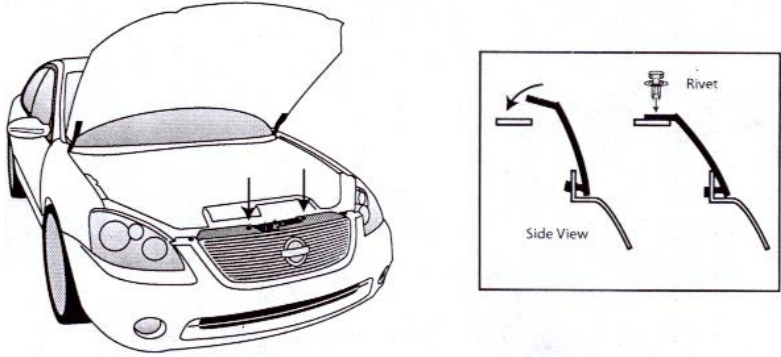
Part#	GR14GED06T/H	Application	For 2002-2004 Nissan Altima
-------	--------------	-------------	-----------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless Steel				

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille with parts list.	
2	Open the hood and remove the four black plastic rivets that secure the top of the grille shell.	<div style="border: 1px solid black; padding: 5px; width: fit-content; margin-left: auto; margin-right: auto;"> <p>To remove the plastic rivets, use a flat head screwdriver pry up on the center, then lift out the whole rivet.</p> </div>
3	Pull back the top of the grille shell and locate the two lower corner clips. Release these clips by squeezing the top and bottom tabs together and pull the grille shell forward. Once the corners are released, carefully pull the grille shell off the vehicle.	<div style="border: 1px solid black; padding: 5px; width: fit-content; margin-left: auto; margin-right: auto;"> <p>Side View</p> </div>
4	From the back of the grille shell, use a phillips head screwdriver to remove the emblem. Use the screws you just removed to attach the stock emblem to the new billet grille.	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>Side View</p> <p>Stock Emblem</p> <p>Stock Grille</p> </div> <div style="text-align: center;"> </div> </div>

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR14GED06T/H	Application	For 2002-2004 Nissan Altima
5	<p>Place the bottom of the new billet grille into place first. Once the bottom four tabs are in place, slide the top into place and secure with two of the four plastic rivets that were removed in step 2. Place the other two plastic rivets in the remaining holes.</p>		
6	<p>Make sure everything is secure and close the hood. Enjoy the award-winning product that you have just installed!</p>		

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!