
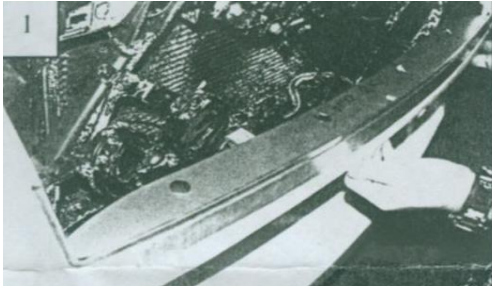
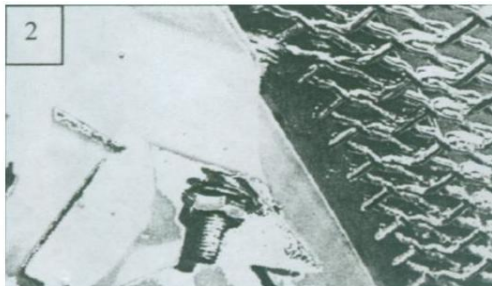


<b>Part#</b>	<b>GR14GED47H</b>	<i>Application</i>	<b>03~07 Infiniti QX56 - Stainless Steel Mesh Grille</b>
--------------	-------------------	--------------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	4	Nylon Lock Nuts	11	6-32
	2	Studs	4	6-32×2"	5	Plastic Body Retainers	4	
	3	Washers	4					

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	
3	Center the billet grille into the opening of the factory grille shell. Secure the bolt to the threaded holes on the front of the grille. Be sure the bolts are through the OEM grille shell.	
4	Secure billet grille using the nuts from the back side of the OEM grille shell.	
6	<p>These screws will be used to adjust the position to the hood on top. Center the grille in place; slide the upper mounting screws into the factory mounting holes. Align the four holes in the lower mounting plate to the factory holes in the hood. Use the plastic tree retainers to secure the lower plate (1). Adjust the upper nuts until the grille is aligned with the hood properly. Use the remaining flat washers and Nylon lock nuts to secure the upper mounting screws (2). Loosen the hardware and adjust the grille if needed. The factory logo is held on with double-sided tape. Use a heat gun or hair drier to heat the tape and pry from the factory grille.</p>	 
7	Make sure the billet grille is centered and tighten the fasteners. but do not over-tighten.	N/A
8	Reinstall the black plastic cover which was removed in step 2.	N/A
9	Installation completed!!!	N/A

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.  
 Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.  
 We are not responsible for any damage caused by the installation. Thank you for choosing our product!