
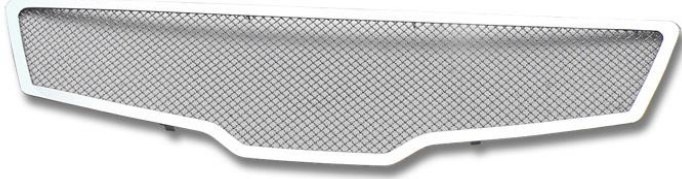


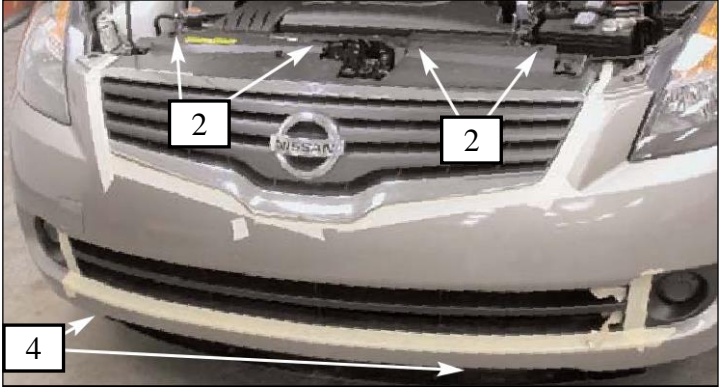


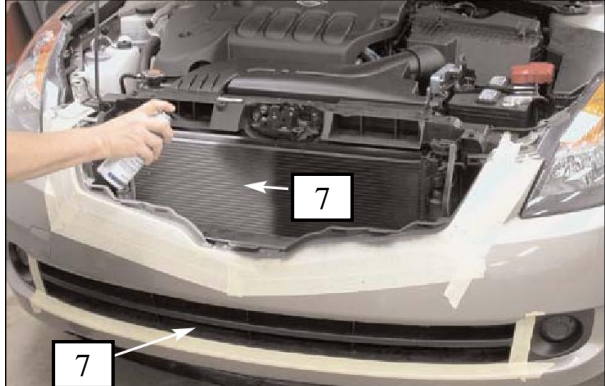
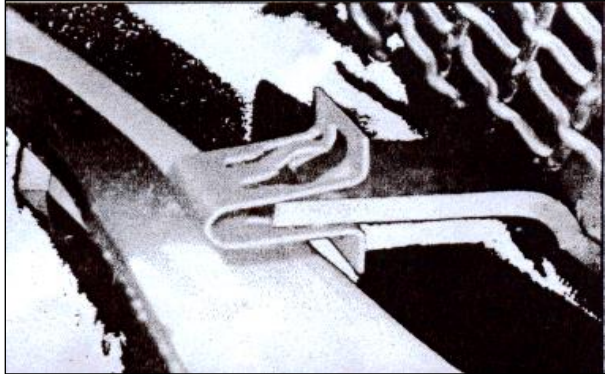
Part#	GR14GFD76T/H	Application	For 2007-2009 Nissan Altima Sedan
-------	--------------	-------------	-----------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	4	Nylon Lock Nuts	4	6-32
	2	Washers	4	8#	5	Top Mounting Plate		
	3	Molding Clips	2					

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Open the hood and remove the four (4) push pins retaining the top of the grille to the support by pushing in on the center of the pins until they click. Lift straight up to remove the push pins (save pins for reinstallation) .	
3	Apply protective tape around the upper and lower grille openings to protect the paint.	
4	Remove the push pins across the bottom of the bumper cover.	
5	To remove the stock grille, you must tilt the top of the grille out and squeeze the lower four (4) retaining clips and pull the grille straight out from the bumper cover.	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR14GFD76T/H	Application	For 2007-2009 Nissan Altima Sedan
6	For light colored vehicles, tape up the 1/2" inward of the upper grille opening and scuff the factory paint.		
7	Apply semi gloss or flat black paint to everything inside the upper and lower grille openings that are not already painted black.		
8	Attach the top mounting plate to the grille; install so the part number can be read on top. Use the washers and nuts to secure the plate. Install the two molding clips onto the lower mounting tabs as shown.		
9	Center the grille into the opening. The lower mounting tabs align with two of the factory mounting holes; Slide in place. The new grille should install with minimal gap along the bottom (approximately 1/16" ). It may be necessary to slightly bend the lower mounting tabs with a pair of pliers. The top mounting plate aligns with the factory holes. Use the factory fasteners to secure the plate.		
10	Slowly close the hood making sure the grille does not interfere with the hood. Remove the grille and adjust if needed.		
11	Installation completed!!!		

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!