
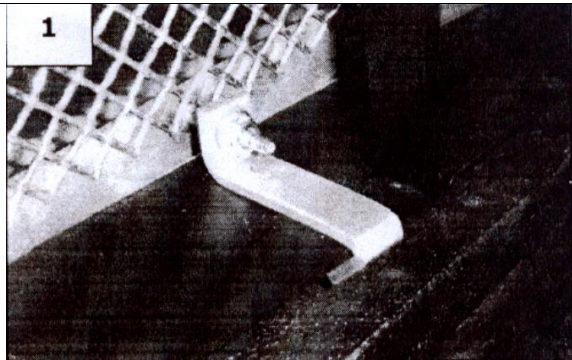


Part#	GR14GFE08T/H	Application	For 2008-2015 Nissan Armada
-------	--------------	-------------	-----------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	4	Studs	4	6-32 × 2"
	2	Kep Nuts	4	6-32	5	Washers	4	
	3	J-Hooks	2	2"	6	L - Brackets	2	1/2"

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Remove the factory grille from the truck. Use a small slotted screwdriver to un-clip the plastic clips. There are two on each end, four along the top and three along the bottom. Now remove the grille.	
3	Center the lower grille into opening. Thread a stud in each nut welded to the grille.	
4	Reaching behind the bumper, secure the top of the grille with the provided L-Brackets and nuts. Secure the lower portion of the grille using the provided J-hooks and nuts .	
5	Make sure the grille is centered and tighten the fasteners. But do not over-tighten.	
6	Reinstall the black plastic cover which was removed in step 2.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!