



PATENT PRODUCT

Grille Installation Instruction

Rev. 20220501




Part#	N76567T&H	Application	For 2007-2009 Nissan Altima Coupe
--------------	-----------	--------------------	-----------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	#1	Mesh Grille	1	Stainless Steel	#4	Keq Nuts	2	6-32
	#2	Studs	2	6-32 × 2"	#5	Washers	2	
	#3	J Hooks	2	2"				



Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
------	-------------	--------------



1	Identify the grille & hardware with parts list.	
2	Use a slotted screwdriver to remove eight plastic fasteners on top of the bumper cover (above the grille); pull the center from each fastener (Fig 1). The upper corners of the bumper cover and grille are secured to the core support with a retaining clip. Pull the bumper cover forward on one end; from behind the grille, use a slotted screwdriver to depress the clip (Figs 2&3). Repeat on other side.	

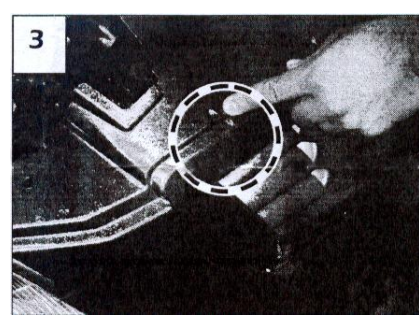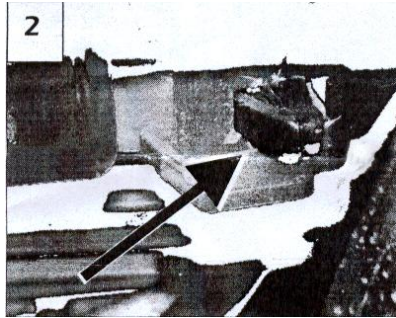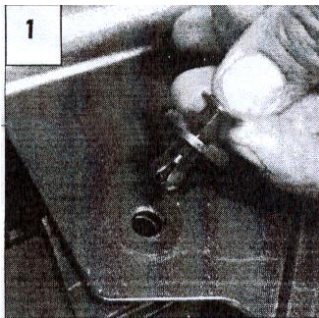

3	Remove the air intake shield in front of the intake (Fig 4). Do not remove the intake behind the core support. Two plastic fasteners secure the shield. Remove the shield (Fig 5).	
----------	--	--

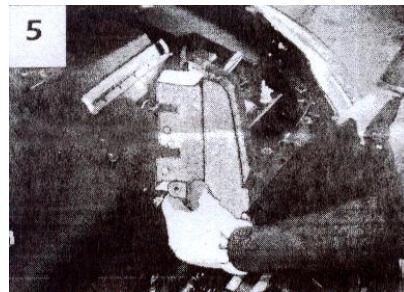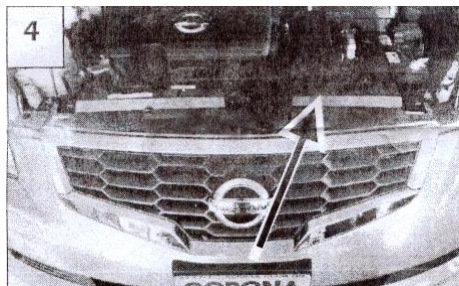

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

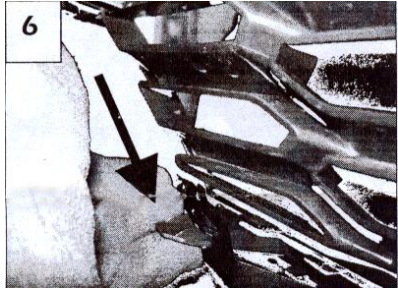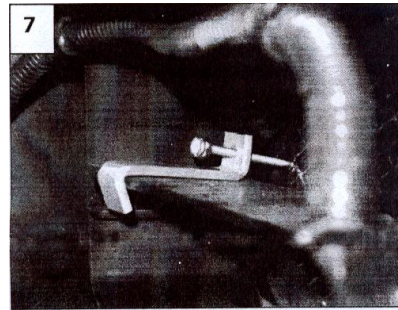Part#	N76567T&H	Application	For 2007-2009 Nissan Altima Coupe
4	<p>Pull the top of the grille assembly forward. Use a finger or screwdriver to depress the remaining molded clips along the top and bottom of the grille (Fig 6). Removal of a lower clip is shown in Fig. 6. There are four clips on top and four on the bottom. Now remove the factory grille from the front of the bumper.</p>		
5	<p>Center the mesh over the bumper opening. Thread a stud in each nut welded to the grille. From behind the grille; using a J hook and nut; place on the welded on stud (Fig 7). Tighten the grille snug. Make sure the insert is centered. Loosen the hardware and adjust if needed. DO NOT OVER TIGHTEN! Re-install the factory grille.</p>		
6	<p>Installation completed.</p>		

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!