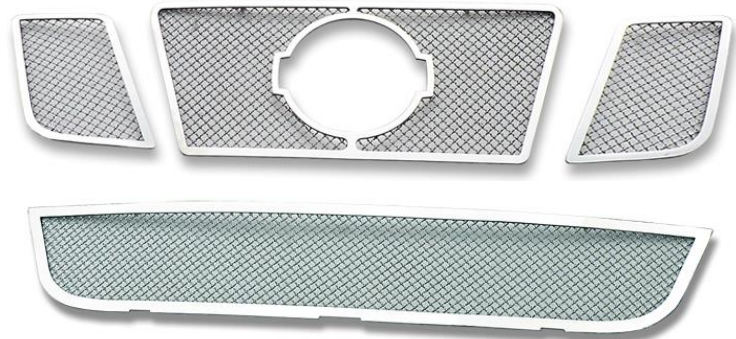


Part#	GR14GGG79T	Application	For 2008-2015 Nissan Armada With Logo Show
-------	------------	-------------	---

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	4	Stainless steel	6	Studs	9	6-32 × 3"
	2	Flat Tabs	9		7	Nylon Lock Nuts	9	6-32
	3	Washers	13		8	Studs	4	6-32 × 2"
	4	Kep Nuts	4	6-32	9	L - Brackets	2	1/2"
	5	J-Hooks	2	2"				

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional (for vehicles with black plastic cover under hood). Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation.	
3	Start with the upper section. Thread a stud in each nut welded to the grille.	
4	Center the grille into the opening of the factory grille shell. Secure the bolt to the threaded holes on the front of the grille. Be sure the bolts are through the OEM grille shell.	
5	From the rear, place a flat tab and a washer on each screw. Now thread a nut on each screw.	
6	Move on to the lower section. Remove the factory grille from the truck. Use a small slotted screwdriver to un-clip the plastic clips. There are two on each end, four along the top and three along the bottom. Now remove the grille.	
7	Reaching behind the bumper, secure the top of the grille with the provided L-Brackets and nuts. Secure the lower portion of the grille using the provided J-hooks and nuts.	
8	Make sure the billet grille is centered and tighten the fasteners. But do not over-tighten.	
9	Reinstall the black plastic cover which was removed in step 2.	
10	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!