



PATENT PRODUCT


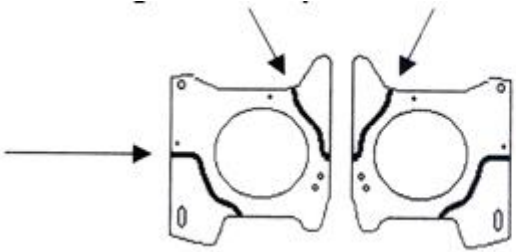
Grille Installation Instruction

Rev. 190401

| | | | |
|--------------|----------------|--------------------|--|
| Part# | GR14HEB30C/J/S | Application | For 1986-1997 Nissan Pickup With/S. Beam Type H/Lamps - Requires Headlamps Recess |
|--------------|----------------|--------------------|--|

| Parts List | Item | Part Name | QTY | Description | Item | Part Name | QTY | Description |
|-------------------|------|---------------|-----|-----------------|------|--------------|-----|-------------|
| | 1 | Billet Grille | 1 | Stainless steel | 4 | Nuts | 4 | 1/4" -20 |
| | 2 | Hex Bolts | 4 | 1/4"-20x3/4" | 5 | Flat Washers | 4 | 1/4" |
| | 3 | Lock Washers | 4 | 1/4" | | | | |

Install Notes: Overlay Replacement Drill Cut

| Step | Description | illustration |
|------|---|--|
| 1 | Identify the grille & hardware with parts list. |  |
| 2 | Optional (for vehicles with black plastic cover under hood), Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation. | |
| 3 | It is required to recess the headlights on 93-97 model vehicles only. Remove the factory headlight assemblies. Now re-mount the headlights using the factory hardware. |  <div style="border: 1px solid black; padding: 5px; margin-left: 100px; width: fit-content;"> <p>Trim the area as indicated by the arrows. Re-install the assembly behind radiator support. Only 2 of the 4 bolts will be used to re-install each headlight assembly. Depending on the year of the vehicle, the top mounting holes may need to be drilled.</p> </div> |
| 4 | There are four brackets welded to the rear of the billet insert. The lower brackets are welded to the bottom billet and upper brackets toward the center of the insert. | |
| 5 | Center the billet on the truck (due to shipping and handling, it may be necessary to slightly bend the brackets to get a perfect fit) and fasten using the hardware provided. | |
| 6 | Make sure the billet grille is centered and tighten the fasteners, but do not over-tighten. | |
| 7 | Reinstall the black plastic cover which was removed in step 2. | |
| 8 | Installation completed!!! | |

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!