
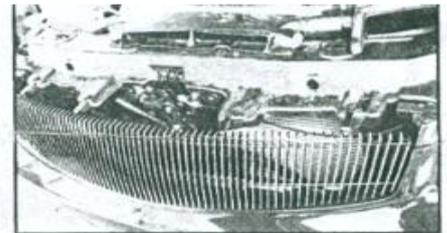
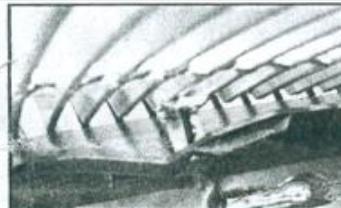


Part#	GR14HEF02V	Application	03~07 Infiniti G35 (2 Door Coupe)
-------	------------	-------------	-----------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Aluminum	5	Machine Screws	4	6-32×1.5
	2	Extension Brackets	4		6	Screws (#6 Head)	4	#8×1"
	3	Flat Nuts	4	8#	7	Nylon Lock Washers	4	6-32
	4	Flat Washers	4	6#				

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Remove the factory grille shell; use a slotted screwdriver to pull the center from each fastener. These fasteners will be re-used; do not discard. Next, lightly pull the top of the grille assembly forward. There is one clip in each corner of the factory grille. Depress each clip by hand or with a screwdriver. Use your fingers to depress the molded clips along the bottom of the grille. The grille can now be removed.	
3	Using the #8 screws and flat nuts; install the extension brackets on top of the grille. Test fit the billet into the opening. The grille may need slight shaping to match the contour of the opening. To shape, apply light pressure to the grille by hand.	
4	Center the grille into the opening. Fasten the upper brackets using the factory fasteners. Adjust the upper brackets if needed; these are made of aluminum and may be bent for proper adjustment.	
5	Mark the lower mounting holes to the plastic (next to the factory mounting holes). Drill a 1/8" hole at each mark. Fasten using the machine screws, washers and nuts. Slowly close the hood. Check the alignment of the grille.	
6	Make sure the billet grille is centered and tighten the fasteners. but do not over-tighten.	
7	Reinstall the black plastic cover which was removed in step 2.	
8	Installation completed!!!	

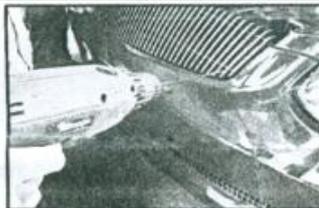

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!