
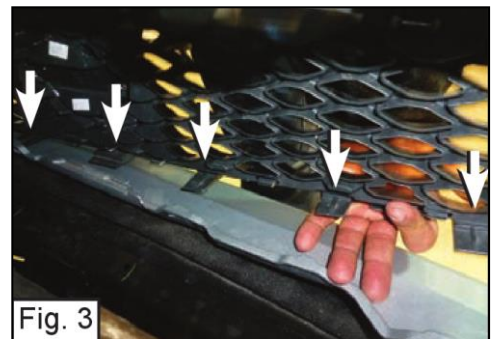


Part#	GR14HFD97A&H	Application	For 2007-2009 Nissan Sentra Not For SER
-------	--------------	-------------	---

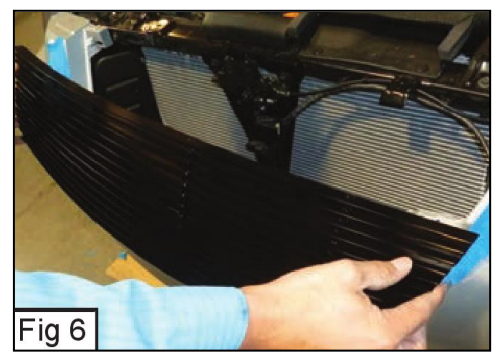
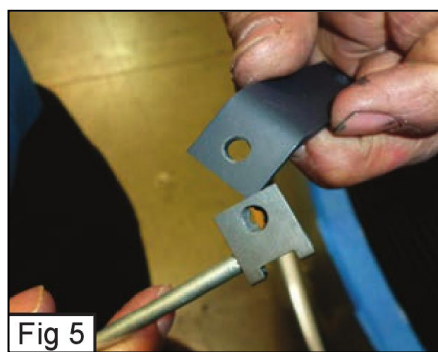
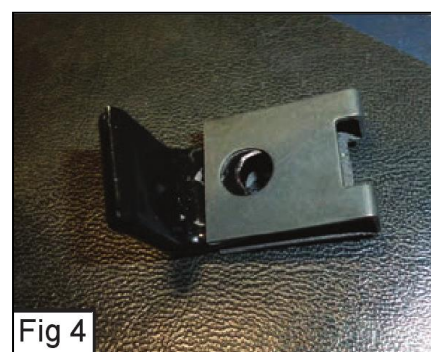
Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Aluminum	5	Screws	2	#8×1" (#6 Head)
	2	U-Nuts	2	#8	6	Nylon Lock Nuts	2	6-32
	3	Machine Screws	2	6-32X1.5"	7	Extension Brackets(Short)	1	
	4	L Brackets	2	1/2" X 1/2"	8	Extension Brackets(Long)	1	

Install Notes: Overlay Replacement Drill Cut

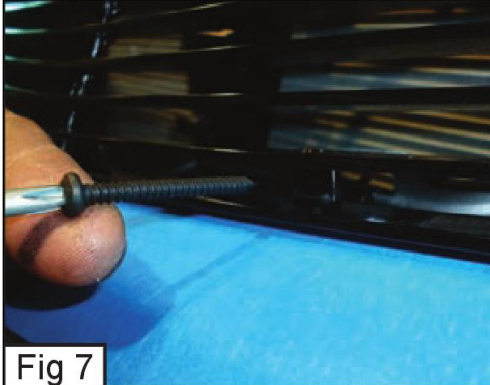

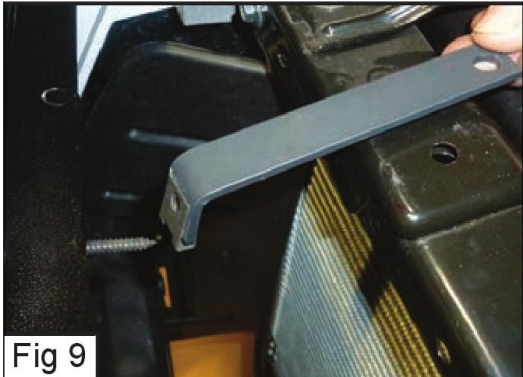

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Remove 4 clips from across the factory grille shell. (Fig 1)	
3	Behind the grille, remove a clip that is on the top edge of the factory shell. (Fig 2)	
4	Unclip 6 clips from around the lower factory grille and remove grille. (Fig 3)	



5	Place the U-nut where the hole on the L-bracket is. (Fig 4)
6	Repeat for the 2 custom brackets. (Fig 5)
7	Place the billet grille through the factory grille opening. (Fig 6)



The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR14HFD97A&H	Application	For 2007-2009 Nissan Sentra Not For SER
8	Place the #8 1.5" screws through the brackets that are along the bottom of the billet grille. (Fig 7)		
9	From behind the grille, place L-brackets on the screws you just placed. (Fig 8)		
<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  <p>Fig 7</p> </div> <div style="text-align: center;">  <p>Fig 8</p> </div> </div>			
10	Place the 1" Screw through the top bracket on the billet grille to thread the longer custom bracket. (Fig 9)		
11	Place back the factory clip onto the custom bracket. (Fig 10)		
<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  <p>Fig 9</p> </div> <div style="text-align: center;">  <p>Fig 10</p> </div> </div>			
12	Installation completed.		

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!