

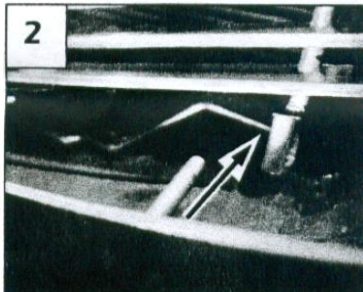
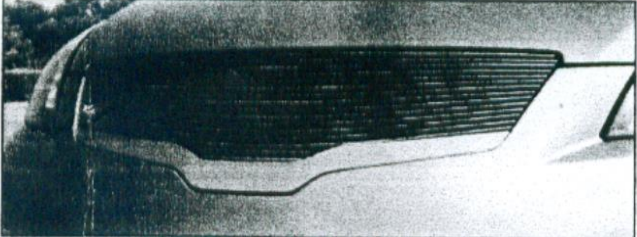


Part#	GR14HFE65J	Application	For 2007-2009 Nissan Altima Sedan
-------	------------	-------------	-----------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Stainless steel	5	Screws (#6 Head)	4	8# × 1"
	2	U-Nuts	2	8#	6	Plastic Push Type Fasteners	2	
	3	Washers	4		7	Extension Brackets	2	
	4	Nuts	4	10-24				

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	
3	Remove the factory grille shell; use a small screwdriver to pull the center from six fasteners along the top of the grille and bumper cover. Next, lightly pull the top of the grille assembly forward; use a slotted screwdriver to depress the clips on each end of the grille. Use your fingers to depress the molded clips along the bottom of the grille; remove the grille. If a bumper grille has been purchased, install at this time.	
4	Slide the #8 u-nuts over the smaller hole in the extension brackets. Install the plastic push fasteners (do not tighten at this time) to secure the other end of extension brackets to the core support (1). Center the billet grille into the opening; align the upper extension brackets to the tabs on the billet grille. Use the #8 screws to secure the grille to the brackets (do not tighten at this time); it may be necessary to slightly bend the extension brackets for the optimum fit.	
5	Center the lower grille trim under the grille. Slide the mounting studs into the factory mounting slots (2). Use the 1/4" washers and nuts to secure the grille trim. Tighten all the hardware; slowly close the hood and check grille to hood clearance. Check the hood prop rod mounting; it may be necessary to slightly bend the rod to clear the upper mounting brackets. Close the hood and check the alignment of the billet insert. If necessary, remove the insert and adjust the brackets.	 
6	Reinstall the black plastic cover which was removed in step 2.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!