


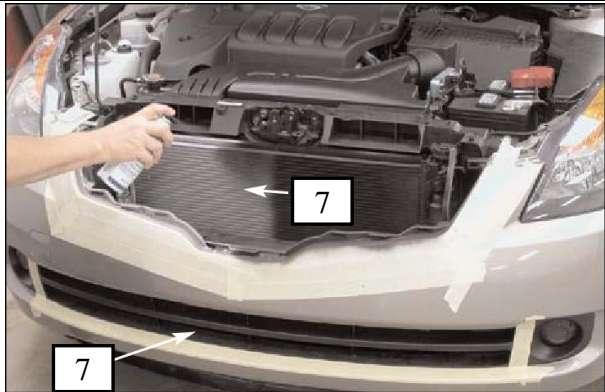
Part#	GR14HGG65A	Application	For 2007-2009 Nissan Altima Sedan
-------	------------	-------------	-----------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	2	Aluminum	6	Screws (#6 Head)	5	#8x1 1/4"
	2	U-Nuts	5	8#	7	Extension Brackets	2	5"
	3	L Brackets	4	1/2x1/2	8	L Bracket	1	1/2x2 1/4x9/16
	4	Machine Screws	4	6-32x1.5"	9	Flat Washers	4	#6
	5	Nylon Lock Nuts	4	6-32	10	J Hooks	2	1.5

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Start with the upper section. Open the hood and remove the four (4) push pins retaining the top of the grille to the support by pushing in on the center of the pins until they click. Lift straight up to remove the push pins (save pins for reinstallation) .	
3	Apply protective tape around the upper and lower grille openings to protect the paint.	
4	Remove the push pins across the bottom of the bumper cover.	
5	To remove the stock grille, you must tilt the top of the grille out and squeeze the lower four (4) retaining clips and pull the grille straight out from the bumper cover.	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR14HGG65A	Application	For 2007-2009 Nissan Altima Sedan
6	For light colored vehicles, tape up the 1/2" inward of the upper grille opening and scuff the factory paint.		
7	Apply semi gloss or flat black paint to everything inside the upper and lower grille openings that are not already painted black.		
8	Center the billet grille into the opening of the factory grille shell.		
9	Slide a u-nut over the small hole in the L brackets (1). Test fit the grille into the opening. The 5" extension brackets secure to the core support (2); aligned with the 1/2" mounting tabs on top of the billet. Install these using the plastic push fasteners. (3) Attach the billet to the extension brackets; do not fully tighten. Use the screws provided. Attach the shorter L brackets along the bottom; on each end (3). Secure the longer L bracket in the center. Close the hood and check the alignment of the billet insert. If necessary, remove the insert and adjust the brackets.		
10	Continue to the lower section. Center the billet over the opening. Remove the insert. Note the tabs welded to the rear of the insert. From the front, insert a screw into each tab on the billet insert. Install the L brackets on the top; then thread a nut and washer on each screw. Install the J hooks on the bottom. Now place the billet insert over the opening. Wrap the brackets around the factory cross bars; tighten the hardware. Make sure the insert is centered; loosen the hardware and adjust if needed.		
11	Make sure the billet grille is centered and tighten the fasteners, but do not over-tighten.		
12	Installation completed!!!		

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!