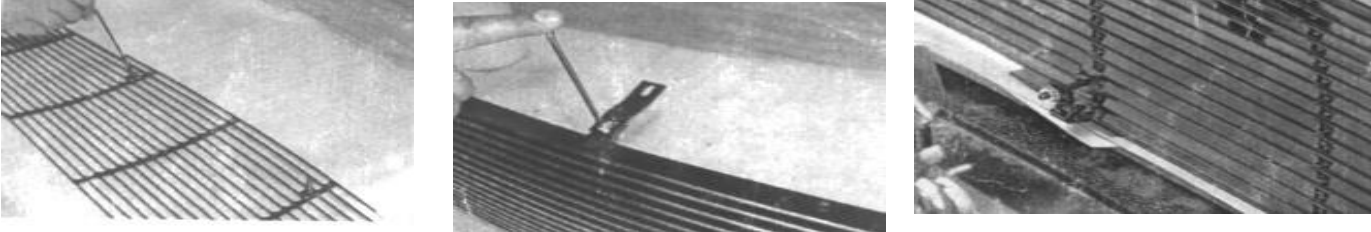
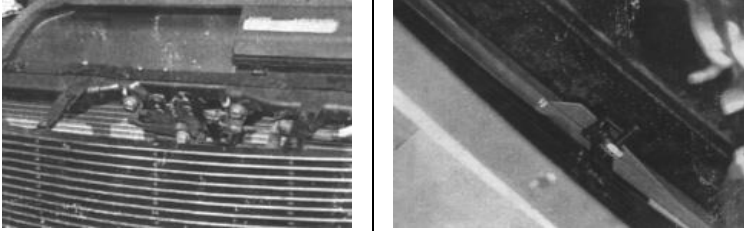


| | | | |
|-------|------------|-------------|-------------------------|
| Part# | GR14HGI65C | Application | 2005-2006 Nissan Altima |
|-------|------------|-------------|-------------------------|

| Parts List | Item | Part Name | QTY | Description | Item | Part Name | QTY | Description |
|------------|------|----------------------|-----|-----------------|------|--------------------|-----|-------------|
| | 1 | Billet Grille insert | 2 | Stainless steel | 6 | Keq Nuts | 4 | 10-24 |
| | 2 | Slotted Studs | 2 | 6-32×2" | 7 | Extension Brackets | 2 | / |
| | 3 | Button Head Screws | 4 | 10-24×1" | 8 | Upper Brackets | 2 | / |
| | 4 | Flat Nuts | 2 | 6-32 | 9 | Lock Nut | 4 | 6# |
| | 5 | Stud | 4 | 6#-1.5" | 10 | Tab | 4 | / |

Install Notes: Overlay Replacement Drill Cut

| Step | Description | illustration |
|------|---|--|
| 1 | Identify the grille & hardware with parts list. | |
| 2 | Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. | |
| 3 | Start with the upper section. Attach the fully threaded studs to the back side of the billet grille Next attach the extension brackets to the top of the billet grille, using the provided hardware. Do not tighten down hardware at this time. Attach the lower brackets to the billet grille. | |
| | |  |
| 4 | Place billet grille into the grille opening, center the billet grille making sure that all billet bars are straight, and the spacing is equal on each side of the grille as well as the billet grille being even with the hood line. | |
| 5 | Once the grille is in place, attach the upper brackets to the vehicle. As well secure the lower brackets. |  |
| 6 | Move on to the lower section. Secure the stud to the threaded holes on the rear of the grille. | |
| 7 | Center the grille into the opening of the factory grille shell. Be sure the studs are through the OEM grille shell. | |
| 8 | Secure grille using the lock nuts and tabs from the back side of the OEM grille shell. | |
| 9 | Make sure the grille is centered and tighten the fasteners. | |
| 10 | Reinstall the black plastic cover which was removed in step 2. | |
| 11 | Installation completed!!! | |

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.
Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.
We are not responsible for any damage caused by the installation. Thank you for choosing our product!