
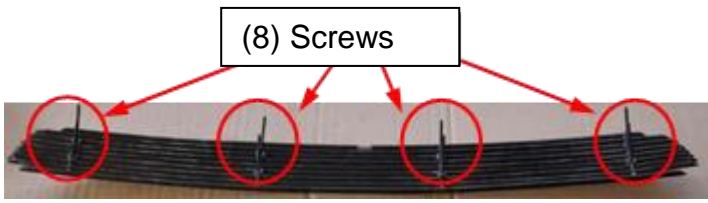



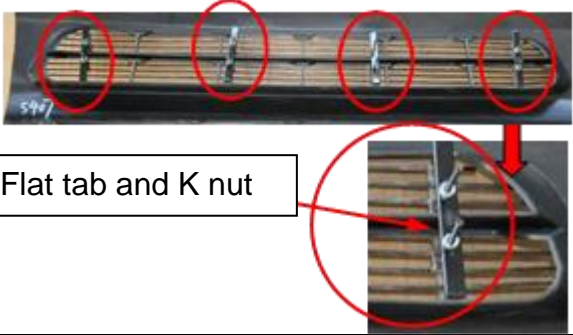
Part#	GR14HGI91A	Application	For 2002-2004 Nissan Altima
-------	-------------------	-------------	------------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille insert	2	Aluminum	6	Lock Washers	2	1/4"
	2	Mounting Clips	2		7	Stud	2	6-32x2"
	3	Hex Bolts	2	1/4"-20x3/4"	8	Keq Nuts	2	6-32
	4	Nut	2	1/4"-20	9	U-Clip Nut	8	8#
	5	Screws	8	8#X3"	10	Flat tab	4	With 2 holes

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	
3	Start with the main grille. Attach the two #10-24UNCx2" studs to the bottom brackets	
4	Now place the billet insert bottom first in to the opening with the studs going through the factory holes and then securing to the lip directly behind the factory mounts using the brackets provided (be sure that the billet grille is centered and fits to your liking before tightening). Now using the factory mount and hardware, secure the top portion.	
5	Move on to the bumper grille. Secure the thread studs in the weld nuts on the rear of the billet grille insert.	
6	Remove the trim panel at the bottom of the front bumper, so than the hand can reach to the rear of lower bumper opening. And remove the license plate.	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.
 Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.
 We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR14HGI91A	Application	For 2002-2004 Nissan Altima
7	Center the mesh grille insert on to the bumper opening, make sure the thread studs go through the plastic grille shell.		
8	Fasten the billet grille insert onto the OEM grille with flat tabs & K nuts.	 <div data-bbox="767 674 1082 736" style="border: 1px solid black; padding: 2px;">Flat tab and K nut</div>	
9	Make sure the billet grille is centered and tighten the fasteners, but do not over-tighten.		
10	Reinstall the black plastic cover which was removed in step 2.		
11	Installation completed!!!		

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!