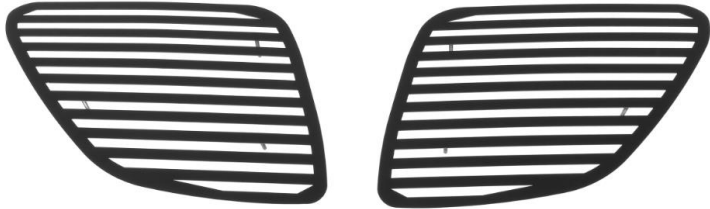


<b>Part#</b>	GR16DEA30S/K	<b>Application</b>	<b>For 2005-2008 Pontiac G6</b>
--------------	--------------	--------------------	---------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	2	Stainless steel	3	Tabs	6	
	2	Kep Nuts	6	6-32				

**Install Notes:** Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional (for vehicles with black plastic cover under hood), Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. If you are still unable to access the rear, remove the grille shell and reattach after installation.	
3	Take out our grille and hardware from the package. You must be care of doing this for protect the surface of the grille.	
4	Now thread studs into the grille using a slotted screwdriver. Then push the studs through the grid of the shell and center the grille into the opening.	
5	Fasten the grille use the kep nuts and washers from the rear, but do not over-tighten.	
6	Reinstall the black plastic cover which was removed in step 2.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!