



PATENT PRODUCT

Grille Installation Instruction

Rev. 20210301

Part#	P65131C&J&S	Application	For 2005-2009 Pontiac G6 Not For GXP Model
--------------	-------------	--------------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	#1	Billet Grille	1	Stainless Steel	#3	Screws	6	8# × 2.5"
	#2	J-Tabs	6		#4	U-Clip Nuts	6	8#

Install Notes: Overlay Replacement Drill Cut


Step	Description	illustration
------	-------------	--------------

1	Identify the grille & hardware with parts list.	
---	---	--

2	Optional: pop hood, remove the black plastic cover (on top of OEM grille) from vehicle. If you are still unable to access the rear, remove the grille shell according to factory manual.	
---	--	--


3	Install the U-clip nuts onto the tabs as shown.	
---	---	--

4	Secure billet grille using the U-Clip Nuts and J-Tabs from the back side of the grille shell as shown.	
---	--	--

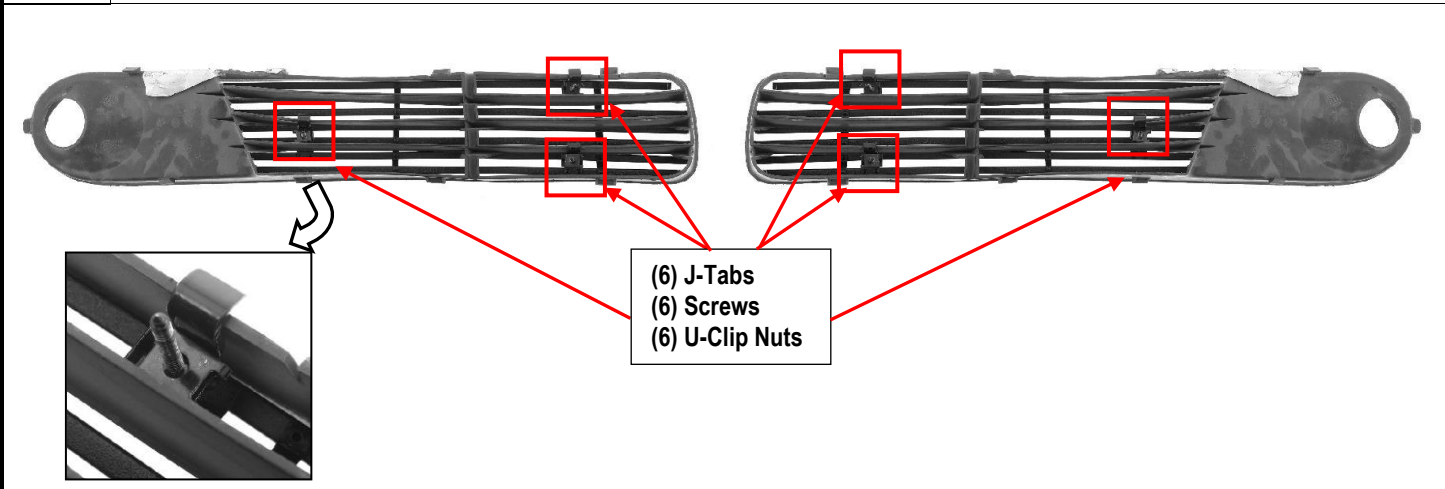

5	Make sure the insert is centered and tighten the hardware.	
---	--	--

6	Reinstall the plastic shroud with the fasteners removed in Step 2.	
---	--	--

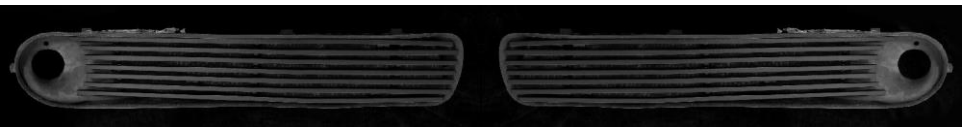7	Installation completed.	
---	-------------------------	--

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!