



PATENT PRODUCT


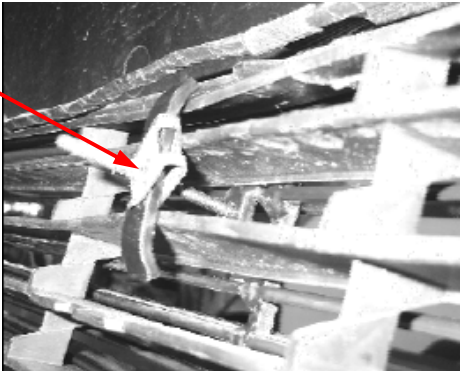

Grille Installation Instruction

Rev. 130501

Part#	GR16FEH07H	2004-2006 Pontiac GTO (Lower Bumper)
--------------	------------	--------------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille insert	1	11 bars	3	Flange bracket	4	/
2	Screw	4	6-32 x 2"	4	U-clip	4	8#	

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the billet grille inserts & hardware with parts list.	
2	If you have purchased the main upper grille with the bumper insert, start the installation of the top grilles as indicated. If not, remove the fasteners securing the bumper cover along the bottom to gain access.	
3	Slide the U-nuts over the holes on the Lange brackets. Center the bumper insert over the grille mesh. Insert the machine screws into the tabs welded to the insert. From the back, fasten the flange brackets to the screws. Wrap the flanges around the plastic bars and tighten.	<div data-bbox="778 936 938 1079" style="border: 1px solid black; padding: 5px; display: inline-block;"> Screw, flange bracket & u-clip </div> 
4	Re-install the fasteners securing the bumper cover.	
5	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result.
 Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.
 We are not responsible for any damage caused by the installation. Thank you for choosing our product!