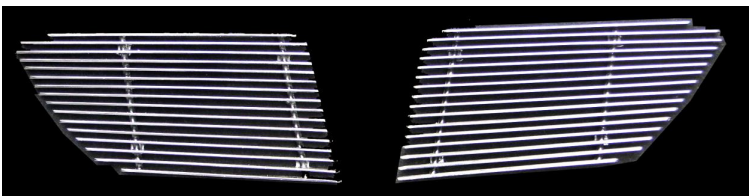
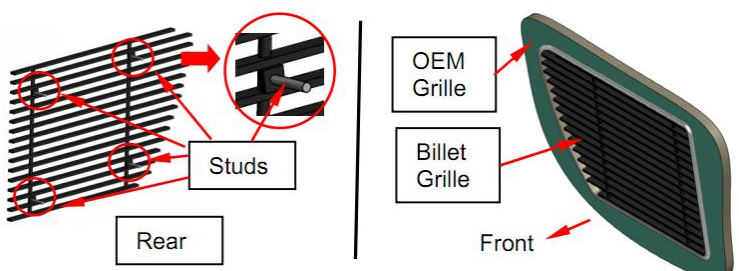
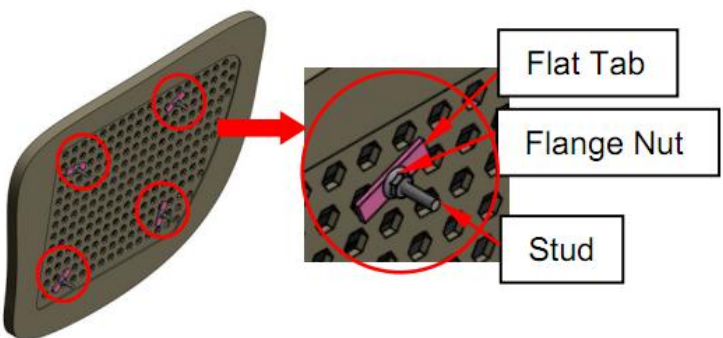



Part#	GR16FGB14H	Application	08~10 Pontiac G8 – 2-pc Billet Grille
-------	------------	-------------	---------------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	2	Aluminum	3	Stud	8	10#-24
	2	Flat Tab	8	With hole	4	Flange Nut	8	10#-24

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Secure the studs into the thread holes on the rear of the billet grille. Attach the grille onto the OEM grille from front side.	
3	Be sure the studs are through the honeycomb, and then fasten the grille onto the plastic honeycomb on the rear of the OEM grille with the flat tabs & flange nuts.	
4	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!