


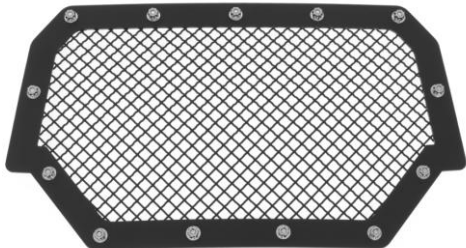


Part#	GR16LFJ07H	Application	For 2014-2017 Polaris RZR XP 1000 Upper Bumper
-------	------------	-------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	3	Flat Nuts	4	#8
	2	Screws	4	8# X 3/4"				

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Begin by removing factory grille assembly from vehicle. Refer to vehicles owner manual for proper front grille disassembly. Carefully place the grille face up on a soft surface. Remove the center grille by depressing the two upper tabs while pulling the grille out. (Fig 1)	 Fig 1
3	Position the Grille into the center of the factory grille shell, flip the entire assembly facedown exposing the back of the grille. Align the four pre-drilled outer tabs along the inside factory grille shell. Using your power drill, carefully drill a 9/16" hole into the factory grille assembly. (Fig 2)	 Fig 2
4	Align the grille tabs with the inner factory grille opening. Using your phillips screwdriver secure the grille to the factory grille shell with supplied #8 screws and #8 Flat Nuts. (Fig 3)	 Fig 3
5	Make sure the billet grille is centered and tighten the fasteners.	
6	Reinstall factory grille assembly in reverse order of assembly.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!