

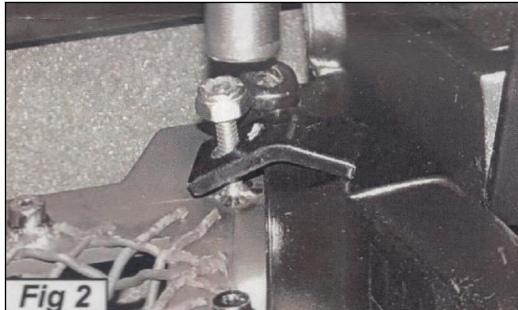
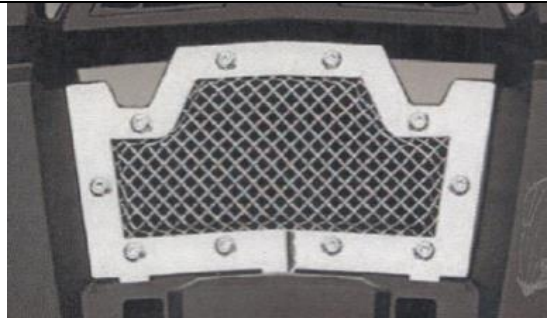


Part#	GR16LFJ08H	Application	For 2014-2017 Polaris RZR XP 1000 Lower Bumper
-------	------------	-------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	3	Brackets	2	
	2	Flange Hex Nuts	2	10-24				

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Begin by removing factory grille assembly from vehicle. Refer to vehicles owner manual for proper front grille disassembly. Carefully place the grille face up on a soft surface. Remove the lower grille by unscrewing the two factory Philips head screws located along the top of the lower grille. (Fig 1)	 Fig 1
3	Position the Grille into the center of the factory grille shell. While supporting the grille assembly, flip the entire assembly face down exposing the back of the grille. Install the two brackets and nuts in the two exposed studs located on opposite sides of the grille securing the brackets to the factory grille opening. (Fig 2)	 Fig 2
4	Secure the tabs to the grille with the included 10# nuts. The brackets will secure the grille to the assembly.	
5	Make sure the billet grille is centered and tighten the fasteners.	
6	Reinstall factory grille assembly in reverse order of assembly.	
7	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!