

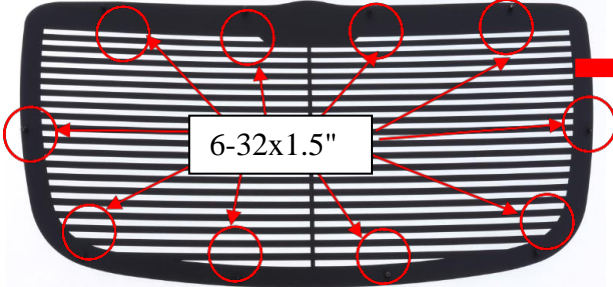




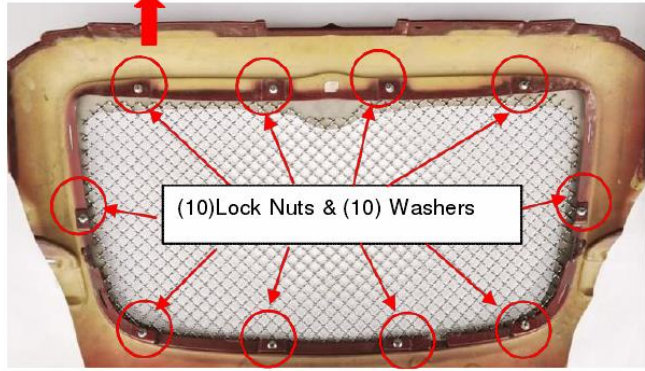
Part#	GR18DEC00S/K	Application	For 2005-2010 Chrysler 300 / 300C
-------	--------------	-------------	-----------------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	2	Stainless steel	4	Washer	10	6#
	2	Stud	10	6-32×1 1/2"	5	Plastic Body Retainers	6	For replacing the OEM Retainers
	3	Lock Nut	10	6-32				

Install Notes: Overlay ☐ Replacement ☒ Drill ☒ Cut ☐

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell. Option: If necessary, according to the factory menu, remove the front bumper (with OEM grille) from vehicle.	
3	According to the factory menu, remove the OEM grille shell from vehicle.	
4	Secure the studs to the welded nut on the rear of the grille.	 
5	Center the grille into the opening on the factory front bumper. Be sure the studs are through the factory holes on the front bumper. *if necessary, drill holes on the lip of the front bumper according to the position of the studs.	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.
 Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.
 We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR18DEC00S/K	Application	For 2005-2010 Chrysler 300 / 300C
6	<p>Secure grille onto the front bumper using the washers & lock nuts from the back side of the OEM front bumper.</p> <div data-bbox="820 270 1036 485" data-label="Image">  </div> <div data-bbox="1135 363 1370 422" data-label="Text"> <p>Example Only</p> </div> <div data-bbox="794 495 1435 863" data-label="Image">  <div data-bbox="954 678 1312 737" data-label="Text"> <p>(10) Lock Nuts & (10) Washers</p> </div> </div>		
7	Make sure the grille is centered and tighten the fasteners.		
8	Re-install the front bumper with grille on to the vehicle.		
9	Reinstall the black plastic cover which was removed in step 2		
10	Installation completed!!!		

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!